



HEIDENHAIN



Evaluation Electronics

For Metrology Applications

April 2017

For many metrology applications, ranging from simple measuring stations to complex inspection systems with multiple measuring points, HEIDENHAIN supports you with compatible evaluation electronics.

The functionality always orients itself to the specific application. Whether it is an SPC inspection station, a tool presetter, a profile projector, a measuring microscope, or a manual coordinate measuring machine, the **evaluation electronics for metrology applications** from HEIDENHAIN are the right choice for measurement tasks. There is even a CNC option for the automation of measurement tasks.



Evaluation electronics for 2-D and 3-D measuring tasks

Digital readouts from HEIDENHAIN for manual machine tools optimally support the operator with well proven cycles for milling, drilling and turning. You can find these digital readouts on the Internet at www.heidenhain.de or in the *Digital Readouts and Linear Encoders for Manually Operated Machine Tools* brochure.



Evaluation electronics for measuring and testing tasks



Further information:

Comprehensive descriptions of all available interfaces as well as general electrical information are included in the *Interfaces of HEIDENHAIN Encoders* brochure, ID 1078628-xx.

You can download the operating instructions in the desired language free of charge from the HEIDENHAIN homepage.

This brochure supersedes all previous editions, which thereby become invalid. The basis for ordering from HEIDENHAIN is always the brochure edition valid when the order is made.

Standards (EN, ISO, etc.) apply only where explicitly stated in the catalog.

Contents

Overview		
	Selection guide for 2-D and 3-D measuring tasks	4
	Selection guide for measuring and testing tasks	6
Specifications		
2-D and 3-D measuring tasks	ND 100 QUADRA-CHEK – simple evaluation unit for 2-D geometries	8
	ND 1200 QUADRA-CHEK – evaluation unit for 2-D geometries	10
	ND 1300 QUADRA-CHEK – evaluation unit for convenient 2-D measurement	12
	ND 1400 QUADRA-CHEK – evaluation unit for manual 3-D measuring machines	14
	QUADRA-CHEK 3000 – evaluation unit for intuitive 2-D measurement	16
	IK 5000 QUADRA-CHEK – evaluation unit as universal PC package solution	20
Measuring and testing tasks	ND 287 – evaluation unit for measuring and testing stations	24
	ND 1100 QUADRA-CHEK – evaluation unit for simple positioning tasks	26
	ND 2100G GAGE-CHEK – evaluation unit for multipoint inspection apparatuses	28
	MSE 1000 – modular evaluation unit for multipoint inspection apparatuses	30
	EIB 700 – evaluation unit with measured-value memory	34
	IK 220 – evaluation unit as a PC solution	36
Mounting		
	Dimensions and installation of ND 100	38
	Dimensions and installation of ND 200	39
	Dimensions and installation of ND 1000/ND 2000	40
	Dimensions and installation of QUADRA-CHEK 3000	42
	Dimensions and installation of MSE 1000	44
	Dimensions and installation of EIB 700	46
Accessories		
	Calibration and demonstration parts	47
	External control elements	48
	Optical edge detector	49
Electrical connection		
Interfaces	Overview	50
	Encoders	55
	Switching inputs/outputs of the ND 287	58
	Inputs/outputs of the MSE 1000	60
	Software	62

Selection guide

2-D and 3-D measuring tasks

	Monitor	Axes		Functions
		Length	Angle	
ND 100 QUADRA-CHEK Evaluation electronics for: <ul style="list-style-type: none"> • Profile projectors • Measuring microscopes 	Monochrome	2 (XY)	–	<ul style="list-style-type: none"> • Measurement of 2-D features • Point measurement with crosshairs • Graphic display of measurement results
		2 (XY)	1 (Q)	
		3 (XYZ)	–	
ND 1200 QUADRA-CHEK Evaluation electronics for: <ul style="list-style-type: none"> • Profile projectors • Measuring microscopes • 2-D measuring machines 	Monochrome	2 (XY)	–	<ul style="list-style-type: none"> • Measurement of 2-D features • Measure Magic function • Point measurement with crosshairs • Programming of features and parts • Graphic display of measurement results
		2 (XY)	1 (Q)	
		3 (XYZ)	–	
		3 (XYZ)	1 (Q)	
ND 1300 QUADRA-CHEK Evaluation electronics for: <ul style="list-style-type: none"> • Profile projectors • Measuring microscopes • Video measuring machines 	Color touchscreen	2 (XY)	–	<ul style="list-style-type: none"> • Measurement of 2-D features • Measure Magic function • Point measurement with crosshairs • Programming of features and parts • Graphic display of measurement results
		2 (XY)	1 (Q)	
		3 (XYZ)	–	
		3 (XYZ)	1 (Q)	
ND 1400 QUADRA-CHEK Evaluation electronics for: <ul style="list-style-type: none"> • Manual coordinate measuring machines 	Color touchscreen	3 (XYZ)	1 (Q)	<ul style="list-style-type: none"> • Measurement of 2-D and 3-D features • Points measured via touch probe, crosshairs or rigid probing element • Measure Magic function • Programming of features and parts • Graphic display of measurement results • Five coordinate systems can be stored • Touch-probe management
QUADRA-CHEK 3000 Evaluation electronics for: <ul style="list-style-type: none"> • Profile projectors • Measuring microscopes • 2-D measuring machines • Video measuring machines 	Color touchscreen	4 (XYZQ) (2 of which are software options)		<ul style="list-style-type: none"> • Acquisition of 2-D geometry features by measurement, design and definition of geometries • Measuring point acquisition via crosshairs • Creation of measuring programs (teach-in) • Tolerance input and graphic display of measurement results • Creation and output of measurement reports • User management • Measure Magic: automatic recognition of geometries
IK 5000 QUADRA-CHEK Evaluation unit as the universal PC package solution for <ul style="list-style-type: none"> • Profile projectors • Measuring microscopes • Video measuring machines • Coordinate measuring machines 	PC screen	3 (XYZ)	1 (Q)	<ul style="list-style-type: none"> • Measurement of 2-D and 3-D features (depending on the version) • Point measurement with crosshairs • Programming of features and parts • Graphic display of measurement results • Entry of tolerances • Import of CAD drawings for direct comparison • 3-D profiling (option; only with touch probe)
		3 (XYZ)	–	
		3 (XYZ)	1 (Q)	
		3 (XYZ)	1 (Q)	
		2 (XY)	1 (Q)	
		3 (XYZ)	1 (Q)	
		3 (XYZ)	1 (Q)	
		3 (XYZ)	1 (Q)	

Options/Additional functions	Model	Page
–	ND 122	8
	ND 123	
Optical edge finder	ND 1202	10
	ND 1203	
Optical edge finder upon request	ND 1204	
<ul style="list-style-type: none"> Optical edge finder Video edge detection and live image display Archiving and output of live images Zoom and light control, programmable NC axis control and autofocus 	ND 1302	12
	ND 1303	
	ND 1304	
–	ND 1404	14
<ul style="list-style-type: none"> Additional encoder input Video edge finding 	QC 3014 NC	16
	QC 3024 NC	
–	IK 5294	20
3-D; touch probe	IK 5293	
Optical edge finder	IK 5394-EG	
3-D; zoom and light control; video evaluation; touch probe	IK 5394-3D	
CNC; optical edge finder	IK 5493	
CNC; video evaluation; zoom and light control; autofocus	IK 5494-2D	
CNC; 3-D; video evaluation; touch probe; zoom and light control; autofocus	IK 5494-3D	
CNC; 3-D; video evaluation; touch probe TP 200; zoom and light control; autofocus	IK 5594	



ND 100 QUADRA-CHEK



ND 1200 QUADRA-CHEK



ND 1300 QUADRA-CHEK



QUADRA-CHEK 3000



IK 5000 QUADRA-CHEK

Selection guide

Measuring and testing tasks

	Monitor	<div>Axes</div> <div>Length Angle</div>	Functions
ND 200 Evaluation unit for <ul style="list-style-type: none"> • Measurement equipment • Adjustment and inspection equipment • SPC inspection stations 	Monochrome	1 (adjustable)	–
	Color	Up to 2 (adjustable)	Metrological and statistical functions (sorting and tolerance checking, measurement series, SPC)
ND 1100 QUADRA-CHEK Evaluation electronics for <ul style="list-style-type: none"> • Positioning equipment • Measuring fixtures 	Monochrome	2 (adjustable)	Measurement series with min./max. value storage
		3 (adjustable)	
		4 (adjustable)	
ND 2100G GAGE-CHEK Evaluation electronics for <ul style="list-style-type: none"> • Multipoint inspection apparatuses • SPC inspection stations 	Color	4 (adjustable)	<ul style="list-style-type: none"> • Programming of up to 100 parts • Graphic display of measurement results • Sorting and tolerance checking using tolerance and warning limits • Measurement series with min./max. value storage • Entry of formulas and combinations • Functions for statistical process control (SPC)
		8 (adjustable)	
MSE 1000 Modular evaluation electronics for <ul style="list-style-type: none"> • Multipoint inspection apparatuses • SPC inspection stations 	PC screen	Up to 250 (adjustable)	<ul style="list-style-type: none"> • Modular design • Configurable as desired • Various interfaces • Fast communication with higher-level computer system • Universal outputs
EIB 700 Evaluation electronics for <ul style="list-style-type: none"> • Testing stations • Multipoint inspection apparatuses • Mobile data acquisition 	PC screen	4 (adjustable)	<ul style="list-style-type: none"> • Precise position measurement up to 50 kHz updating rate • Programmable measured-value inputs • Internal and external measured-value triggers • Measured-value memory for approx. 250 000 measured values per channel • Connection over standard Ethernet interface to higher-level computer systems
IK 220 Evaluation electronics for installation in computer systems with PCI interface for Measuring and testing stations	PC screen	2 (adjustable)	<ul style="list-style-type: none"> • Programmable measured-value inputs • Internal and external measured-value triggers • Measured-value memory for 8192 measured values per channel

Options/Additional functions	Model	Page
–	ND 280	Brochure: <i>Digital Readouts</i> ¹⁾
Second encoder for sum/difference display, temperature compensation	ND 287	24
Touch probes	ND 1102	26
	ND 1103	
	ND 1104	
–	ND 2104 G	28
	ND 2108 G	
–	MSE 1000	30
Mounting bracket for 19-inch systems	EIB 741 EIB 742	34
Assemblies for encoder outputs and external inputs/outputs	IK 220	36

¹⁾ Brochure: *Digital Readouts and Linear Encoders for Manually Operated Machine Tools*



ND 1100 QUADRA-CHEK



ND 287



ND 2100 G GAGE-CHEK



MSE 1000



EIB 741



IK 220

ND 100 QUADRA-CHEK

–The simple evaluation electronics for 2-D geometries

The ND 100s are evaluation units with two to three axes. They function as measuring computers for 2-D geometries. They are suited as entry-level readouts for optical comparators, measuring microscopes and 2-D measuring machines.

Execution

The ND 100 evaluation unit has a monochrome flat-panel screen for displayed values, dialogs and inputs, graphics functions and soft keys. With its sturdy housing and splash-proof membrane keyboard, the ND 100 is built for the workshop.

Functions

The appropriate combination of defined function keys and context-dependent soft keys always provides you with a clear overview. The innovative operator guidance provides self-explanatory information about the various functions. It already supports you while setting up the coordinate system (aligning the part and specifying the datum).

Predefined features (point, line, circle) are available for measurement. You can apply tolerance values to features and relationships. Only those tolerances actually possible are offered for the selected feature.

The ND 100 readouts measure points on plane (2-D) contours manually via crosshairs.

Data interfaces

A USB interface enables the evaluation unit to indicate measured values and import or export parameters and tables.

Graphic display



In addition to the position values, the ND 100 also displays the features graphically. Along with the individual measuring points, the geometrical and arithmetical deviations are also shown, and circles are shown for the minimum and maximum circumscriptions.

Tolerances

You can apply tolerance values to any feature. Only those tolerances actually possible are offered for the selected feature. This means that a point can only be assigned a tolerance check for its position, whereas a circle can be assigned position and shape tolerances.

Defining features

You can use the QUADRA-CHEK evaluation electronics to define features yourself. For example, this could be a circle whose position and dimensions are exactly defined, or an alignment line that is at a specified angle to a measurable line.

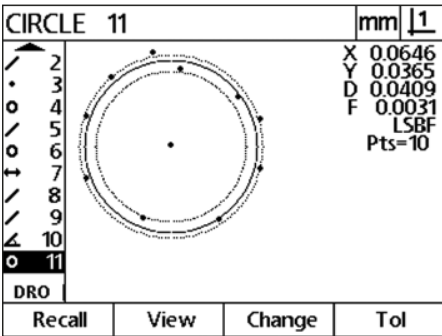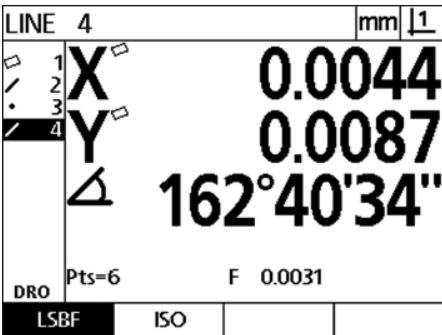



	ND 122	ND 123
Axes	2 (XY)	3 (XYZ oder XYQ, configurable)
Encoder inputs Input frequency	\square TTL ≤ 100 kHz	
Display step ¹⁾	<i>Linear axes:</i> 1 mm to 0.0001 mm <i>Angular axis:</i> 1° bis 0,0001° (00° 00' 01")	
Display	5.7" monochrome flat-panel display for position values, dialogs and inputs, graphics functions and soft keys	
Functions	<ul style="list-style-type: none"> • Measurement of two-dimensional features (2-D) • Point measurement with crosshairs • Graphic display of measurement results • Entry of tolerances • Measurement series with min./max. value storage 	
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 150 points • Squareness calibration • Matrix compensation over up to 30 x 30 points 	
Data interface	<ul style="list-style-type: none"> • USB (type B) 	
Accessories	Base, mounting arm, mounting frame	
Power connection	AC 100 V to 240 V (–15 % to +10 %), 47 Hz to 63 Hz, ≤ 54 W	
Operating temperature	0 °C to 45 °C; (storage temperature –20 °C to 70 °C)	
Protection EN 60529	IP 40, front panel IP 54	
Mounting	Mounting bracket or mounting arm (accessories)	
Mass	≈ 2.6 kg	

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

ND 1200 QUADRA-CHEK

–The evaluation electronics for 2-D geometries

The ND 1200 evaluation electronics can support up to four axes, and function as measuring computers for 2-D geometries. They are mainly suited to optical comparators, measuring microscopes and 2-D measuring machines.

Execution

The QUADRA-CHEK ND 1200 evaluation electronics have a monochrome flat-panel screen for displayed values, dialogs and inputs, graphics functions and soft keys. The robust, die-cast aluminum enclosure meets the demands of metrology and production control.

Functions

The appropriate combination of defined function keys and context-dependent soft keys always provides you with a clear overview. The innovative operator guidance provides self-explanatory information about the various functions. It already supports you while setting up the coordinate system (aligning the part and specifying the datum).

Predefined features (point, line, circle) are available for measurement. The "Measure Magic" function makes measurement especially easy: it selects that feature which best matches the shape implied by the points probed. In addition, you can establish relationships (distances, angles) between features.

You can apply tolerance values to features and relationships. Only those tolerances actually possible are offered for the selected feature. You can create or automatically record measuring programs for repeated parts. The evaluation electronics graphically take you to the next measuring position during program run.


The ND 1200 readouts measure points on plane (2-D) contours manually via crosshairs or, as an option, automatically via the optical edge finder.

Data interfaces

You use the data interfaces to output measuring points as well as to read and transmit settings, compensation values and programs. The RS-232-C/V.24 serial interface enables communication with a PC. You can connect printers or memory media to the USB port. A list of possible printers is available on the Internet at www.heidenhain.de

Graphic display

In addition to the position values, the ND 1200 also displays the features graphically. Along with the individual measuring points, the geometrical and arithmetical deviations are also shown, and circles are shown for the minimum and maximum circumscriptions.

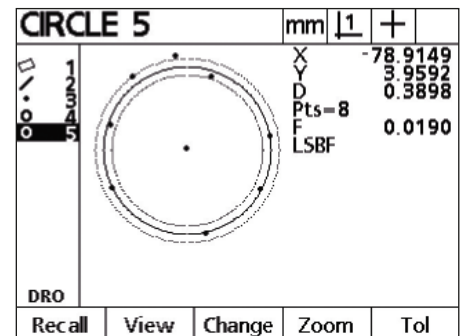


Tolerances

You can apply tolerance values to any feature. Only those tolerances actually possible are offered for the selected feature. This means that a point can only be assigned a tolerance check for its position, whereas a circle can be assigned position and shape tolerances.

CIRCLE 2		mm	1	+
Circle Position and Size Tolerance				
Tol Type: BiDir				
	Actual	Dev		
X	174.9079	0.0079		✓
Y	-20.1577	0.0023		✓
D	58.3624	0.0004		✓
Edit	Nominal	Actual	Dev	Other


Defining features

You can use the QUADRA-CHEK evaluation electronics to define features yourself. For example, this could be a circle whose position and dimensions are exactly defined, or an alignment line that is at a specified angle to a measurable line.

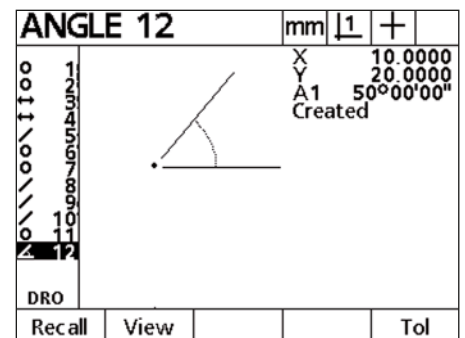

Measure Magic

The Measure Magic function recognizes the geometric pattern based on the distribution of the measuring points, and automatically calculates which feature it is, such as a point, line or circle. If the measuring points are poorly chosen, then it may not be possible to determine the feature unambiguously. Measure Magic then chooses the more common version. You can have the feature be displayed graphically, and then select from the possibilities.

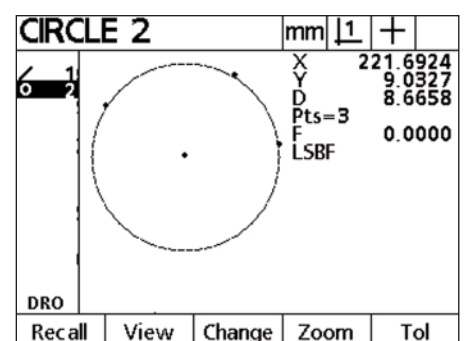



	ND 1202	ND 1203	ND 1204
Axes*	2 (XY)	3 (XYQ) or 3 (XYZ)	4 (XYZQ)
Encoder inputs* Input frequency	$\sim 1 V_{PP}$ or \square TTL (other interfaces upon request) $\sim 1 V_{PP}: \leq 275 \text{ kHz}$; \square TTL: $\leq 3 \text{ MHz}$		
Subdivision factor	10-fold (only at $1 V_{PP}$)		
Display step ¹⁾	Adjustable, max. 7 digits Linear axes XYZ: 1 mm bis 0.0001 mm Angular axis Q: 1° to 0.0001° ($00^\circ 00' 01''$)		
Display	5.7" monochrome flat-panel display for position values, dialogs and inputs, graphics functions and soft keys		
Functions	<ul style="list-style-type: none"> • Measurement of two-dimensional features (2-D) • Point measurement with crosshairs • Programming of features and parts • Measure Magic: automatic recognition of geometries • Graphic display of measurement results • Entry of tolerances • Measurement series with min./max. value storage 		
Edge finder*	Automatic point measurement via optical edge finder (option)		Upon request
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 150 points • Squareness calibration • Matrix compensation over up to 30×30 points 		
Data interface	<ul style="list-style-type: none"> • RS-232-C/V.24 • USB (type A) 		
Other connections	<ul style="list-style-type: none"> • Foot switch for two functions, or remote keypad • Optical edge finder (only if the option is selected) 		
Accessories	Foot switch, remote keypad, fiber-optic cables, holder, demo part, protective cover, tilting base, mounting adapter		
Power connection	AC 100 V to 240 V (-15% to $+10\%$), 47 Hz to 63 Hz, $\leq 100 \text{ W}$		
Operating temperature	0°C to 45°C ; (storage temperature -20°C to 70°C)		
Protection EN 60529	IP 00, front panel IP 40		
Mounting*	Tilting base or mounting base		
Mass	ND with tilting base: $\approx 4.8 \text{ kg}$; ND with mounting adapter: $\approx 2 \text{ kg}$		

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

ND 1300 QUADRA-CHEK

–The evaluation electronics for convenient 2-D measurement

The ND 1300 QUADRA-CHEKs are available in versions for up to four axes. They function as measuring computers with 2-D measurement of points, suiting them for measuring microscopes, measuring projectors and profile projectors, as well as for video measuring machines if the video edge detection option is installed.

Execution

The evaluation electronics of the ND 1300 series are characterized by the large color touchscreen. Their enclosures consist of robust, die-cast aluminum.

Functions

The innovative operator guidance provides self-explanatory information about the various functions. It already supports you while setting up the coordinate system (aligning the part and specifying the datum).

Predefined features (point, line, circle, slot and rectangle) are available for measurement. The "Measure Magic" function makes measurement especially easy. In addition, you can establish relationships (distances, angles) between features.

You can create or automatically record measuring programs for repeated parts. The evaluation electronics graphically take you to the next measuring position during program run.

Depending on the option installed, the ND 1300 probes the points of plane (2-D) contours either automatically or manually via crosshairs, optical edge detection, or a video camera. The integrated image processing function of the video option provides a special benefit: the video image is shown on the screen in real time, and can be saved and output via the data interface. The evaluation electronics even assume complete control of the illumination and the motor zoom.


Data interfaces

You use the data interfaces to output measuring points as well as to read and transmit settings, compensation values and programs. The RS-232-C/V.24 serial interface enables communication with a PC. You can connect printers or memory media to the USB port.

A list of possible printers is available on the Internet at www.heidenhain.de


Clearly structured display

The large, color flat-panel touchscreen enables simple operation with intuitive operator guidance, since in each mode only those functions actually available are offered for selection. The numeric keypad and the few basic function keys are located in ergonomic positions.

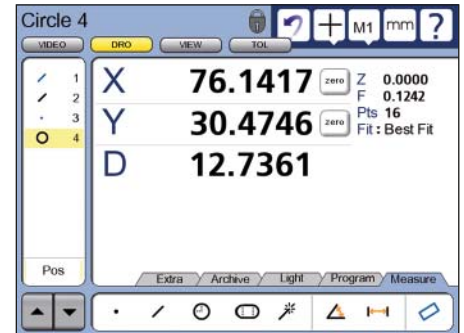


Point measurement

The ND 1300 readouts are designed for 2-D measurements. You are provided with various tools with which you can manually or automatically measure points. For automatic point measurement you simply move to the approximate position. The active tool (option) automatically finds the actual edge. This objective point measurement permits a high degree of repeatability. This makes it possible for you to work quickly, reliably and effortlessly, while at the same time maintaining a low degree of measurement uncertainty.

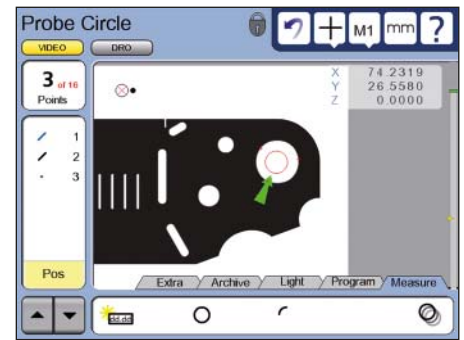


Integrated image processing

The ND 1300 with video option optimally combines in one unit the functions of an evaluation electronics unit with the capability of displaying the image of the measured object directly on the screen. The separate PC with a frame grabber or monitor with crosshair generator that you would normally need is not necessary. Video cameras with S-Video or composite interfaces can be connected.

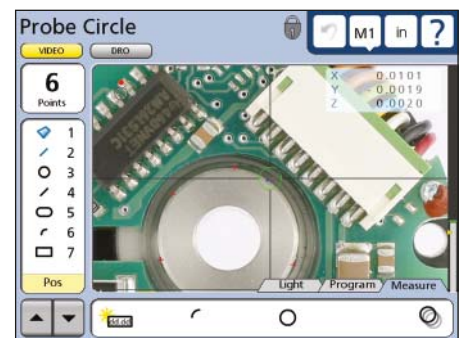

Axis positioning

The CNC option lets the ND 1300 work as a full-fledged control, directly controlling the positioning of the X, Y, Z and Q axes. Servo motors and stepper motors can be connected. Amplifiers with two or three axes for stepping motors are available as accessories.

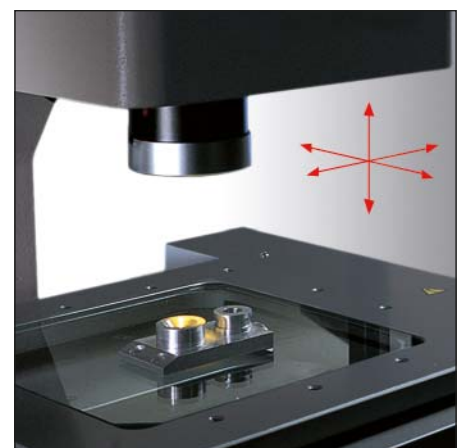



	ND 1302	ND 1303	ND 1304
Axes*	2 (XY)	3 (XYQ) or 3 (XYZ)	4 (XYZQ)
Encoder inputs* Input frequency	$\sim 1 V_{PP}$ or \square TTL (other interfaces upon request) $\sim 1 V_{PP}: \leq 275 \text{ kHz}$; \square TTL: $\leq 3 \text{ MHz}$		
Subdivision factor	10-fold (only at 1 V_{PP})		
Display step ¹⁾	Adjustable, max. 7 digits Linear axes XYZ: 1 mm to 0.0001 mm; angular axis Q: 1° to 0.0001° (00° 00' 01")		
Display	8.4" color flat-panel display (touchscreen); resolution: SVGA 800 x 600 pixels, for position values, dialogs and inputs, graphics functions, soft keys, and display of video images with the <i>Video</i> option		
Functions	<ul style="list-style-type: none"> • Measurement of two-dimensional features (2-D) • Point measurement with crosshairs • Programming of features and parts • Measure Magic: automatic recognition of geometries • Tolerance display and graphic display of measurement results 		
Edge finder* (option)	<ul style="list-style-type: none"> • Automatic point measurement via optical edge finder 		
Video* (option)	<ul style="list-style-type: none"> • Automatic point measurement via video edge detection • Show live images • Archive and output live images (<i>Archive</i> option, only with the <i>Video</i> and <i>Zoom</i> options) • Zoom and light control, programmable (<i>Zoom</i> option, only with the <i>Video</i> and <i>CNC</i> options) 		
CNC* (option)	<ul style="list-style-type: none"> • Automation of measurement tasks • Axis control (for XYZQ) for servo and stepper motors • Autofocus via stepper-motor control 		
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 1000 points • Squareness calibration; matrix compensation over up to 30 x 30 points 		
Data interface	RS-232-C/V.24 and USB (type A)		
Other connections	<ul style="list-style-type: none"> • Foot switch for two functions • Video connection for S-Video and composite (<i>video</i> option) • Light control over six light sources and zoom control (for <i>video</i> and <i>zoom</i> options) • CNC outputs and inputs for joystick (for <i>CNC</i> option) 		
Accessories	Foot switch, fiber-optic cable, holder, amplifier, calibration standard, demo parts, protective cover, tilting base, mounting adapter		
Power connection	AC 100 V to 240 V (–15 % to +10 %), 47 Hz to 63 Hz, $\leq 100 \text{ W}$		
Operating temperature	0 °C to 45 °C; (storage temperature –20 °C to 70 °C)		
Protection EN 60529	IP 00, front panel IP 40		
Mounting*	Tilting base or mounting base		
Mass	ND with tilting base: $\approx 4.8 \text{ kg}$; ND with mounting adapter: $\approx 2 \text{ kg}$		

* Please select when ordering; the **Edge finder** and *Video* options cannot be combined

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

ND 1400 QUADRA-CHEK

–The evaluation electronics for manual 3-D measuring machines

The ND 1400 QUADRA-CHEK evaluation unit supports four axes: in addition to the linear axes XYZ it features an auxiliary axis Q solely for angular display. The readout is designed specifically for manual coordinate measuring machines, and can capture two- and three-dimensional features with its measuring computer functionality.

Execution

The ND 1400 series evaluation electronics are characterized by the large color touchscreen. Their enclosures consist of robust, die-cast aluminum.

Functions

The innovative operator guidance provides self-explanatory information about the various functions. It already supports you while setting up the coordinate system (finding the reference system, aligning the part, and specifying the datum).

Predefined features (point, line, circle, slot, rectangle, plane, cylinder, cone, sphere) are available for measurement. The "Measure Magic" function makes measurement especially easy: it selects that feature which best matches the shape implied by the points probed. In addition, you can establish relationships (distances, angles) between all features.

You can create or automatically record measuring programs for repeated parts. The evaluation electronics graphically take you to the next measuring position during program run.

You can also use the ND 1400 to measure 3-D features, such as surfaces, cylinders, cones, etc. The measuring points are probed with a touch probe. If a triggering touch probe is used, the values are transferred automatically. With rigid probing elements a key must be pressed. The measured features can be clearly displayed either in three dimensions or in one of the three projection planes.


Data interfaces

You use the data interfaces to output measuring points as well as to read and transmit settings, compensation values and programs. The RS-232-C/V.24 serial interface enables communication with a PC. You can connect printers or memory media to the USB port.

A list of possible printers is available on the Internet at www.heidenhain.de


Clearly structured display

The large, color, flat-panel touchscreen enables simple operation with intuitive operator guidance, since in each mode only those functions actually available are offered for selection. The numeric keypad and the few basic function keys are located in ergonomic positions.

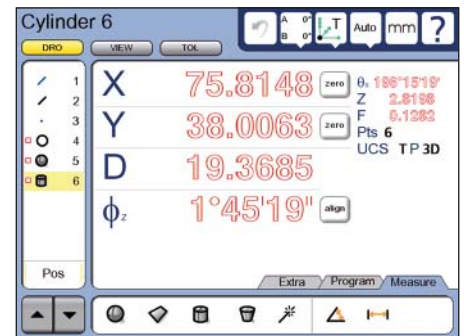


Measuring 3-D contours

In addition to the flat geometric features, such as points, lines, circles, etc., you can also use the ND 1400 to measure 3-D shapes, e.g. cylinders or cones. The screen displays the feature in three dimensions. Colored highlighting of each measuring point lets you identify form errors and any filtered measured values at a glance. The ND 1400 also permits 3-D position and form tolerances, such as flatness and parallelism.

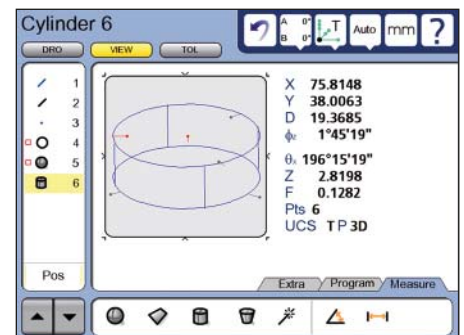


Working with the touch probe

The ND 1400 also supports you optimally while working with touch probes. You can instantaneously call commercial probing elements (normal stylus, star stylus), as well as rigid and tiltable probing heads, all of which are managed in a library, via the touchscreen. During probing the ND automatically takes the direction of probing into account, as well as the length and diameter of the stylus. Even complex parts can be rapidly measured with the five available coordinate systems.

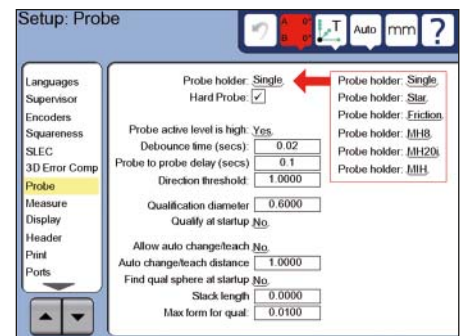

Point measurement

The ND 1400 probes the measuring points via the touch probe of the coordinate measuring machine. A triggering 3-D touch probe is connected directly to the evaluation electronics, and the measured value is transferred automatically. With a rigid probing element the measured value must be transferred by pressing a key. You can use the comprehensive input menu to define numerous parameters.

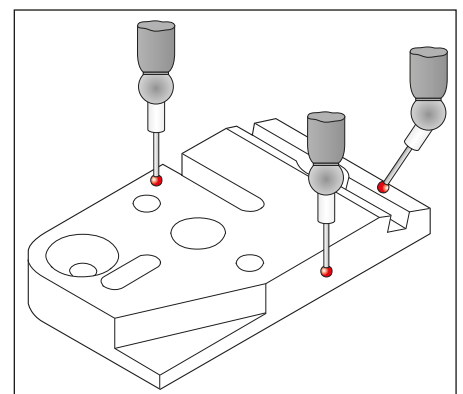



	ND 1404
Axes	4 (XYZQ)
Encoder inputs* Input frequency	$\sim 1 V_{PP}$ or \square TTL (other interfaces upon request) $\sim 1 V_{PP}: \leq 275 \text{ kHz}$; \square TTL: $\leq 3 \text{ MHz}$
Subdivision factor	10-fold (only at $1 V_{PP}$)
Display step ¹⁾	Adjustable, max. 7 digits <i>Linear axes XYZ:</i> 1 mm bis 0.0001 mm <i>Angular axis Q:</i> 1° to 0.0001° (00° 00' 01")
Display	8.4" color flat-panel display (touchscreen); resolution: SVGA 800 x 600 pixels, for position values, dialogs and inputs, graphics functions, and soft keys
Functions	<ul style="list-style-type: none"> • Measurement of two-dimensional and three-dimensional features • Points measured via crosshairs or rigid probing element • Automatic point measurement via touch probe • Programming of features and parts • Measure Magic: automatic recognition of geometries • Graphic display of measurement results, either three-dimensional or in the three projection planes • Entry of tolerances • Five coordinate systems can be stored • Touch-probe management for the various stylus shapes
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 1000 points • Squareness calibration • Matrix compensation over up to 30 x 30 points
Data interface	<ul style="list-style-type: none"> • RS-232-C/V.24 • USB (type A)
Touch-probe connection*	HEIDENHAIN or Renishaw touch probe
Other connections	Foot switch for two functions
Accessories	Foot switch, 3-D demo part, protective cover, tilting base, mounting adapter
Power connection	AC 100 V to 240 V (–15 % to +10 %), 47 Hz to 63 Hz, $\leq 100 \text{ W}$
Operating temperature	0 °C to 45 °C; (storage temperature –20 °C to 70 °C)
Protection EN 60529	IP 00, front panel IP 40
Mounting*	Tilting base or mounting base
Mass	<i>ND with tilting base:</i> $\approx 4.8 \text{ kg}$; <i>ND with mounting adapter:</i> $\approx 2 \text{ kg}$

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

QUADRA-CHEK 3000

– The evaluation electronics for intuitive 2-D measurement

The QUADRA-CHEK 3000 evaluation unit is well suited for mounting on measuring machines, profile projectors, measuring microscopes and video testing machines with up to four axes. You can measure two-dimensional contour features quickly, simply and precisely using innovative measuring tools.

Design

Thanks to its industrial design, the QUADRA-CHEK 3000 is ideal for applications both in the measuring room and in a harsh production environment. The flat aluminum housing with integrated power pack and fanless passive cooling is extremely sturdy and tolerant to negative influences. The large touchscreen of specially hardened glass supports multi-touch gesture control and can be operated with gloves.

Functions

Predefined figures (e.g. point, line, circle, slot and rectangle) are available for the measurement of two-dimensional features. The “Measure Magic” function makes measurement especially easy. This function uses the measured points to automatically select the fitting geometry. Besides the measuring functions, you can also use functions for design and definition, for example in order to create relationships (distance, angle) between two for more contour features.

You can save your measured results in a log individually formatted as .pdf or .csv files, or print them out from a connected computer. The measuring program can automatically record repetitive parts and then play them again.


Software options

The QUADRA-CHEK 3000's performance range can be adapted through software options to specific requirements. You can enable the software options by entering a license key. Please contact HEIDENHAIN for more information.



Clearly structured display

The high-resolution, 12.1-inch color flat-panel display presents all necessary information in a quickly understandable and clearly structured format. The screen content is context sensitive—showing only the functions available in the actual operating situation. The self-explanatory operating controls provide intuitive user guidance.

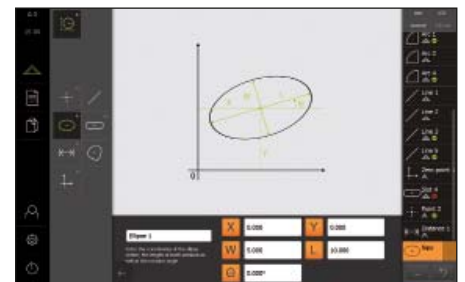



	QUADRA-CHEK 3014 NC	QUADRA-CHEK 3024 NC
Axes	4 (XYZQ) of which, 2 axes can be enabled as software options	
Encoder interface Input frequency	$\sim 1 V_{PP}$ $\leq 400 \text{ kHz}$	\square TTL $\leq 5 \text{ MHz}$
Subdivision factor	5096-fold (at 1 V _{PP})	
Display step	Adjustable, max. 8 digits Linear axes XYZ: to 0.00001 mm; angular axis Q: to 0.00001° (00° 00' 00.1")	
Display	12.1" color flat-panel display (16:10, touchscreen); resolution: WXGA 1280 x 800 pixels, for position values, dialogs and inputs, graphics functions, and video display (VED software option)	
Functions	<ul style="list-style-type: none"> • Acquisition of 2-D geometry features by measurement, design and definition of geometries • Measuring point acquisition via crosshairs • Creation of measuring programs (teach-in) • Tolerance input and graphic display of measurement results • Creation and output of measurement reports • User management • Measure Magic: automatic recognition of geometries 	
Additional encoder input (AEI1 software option)	One additional encoder input	
Video edge finding (VED software option)	<ul style="list-style-type: none"> • Automatic point acquisition via video edge detection • Light control, programmable • Display, archiving and output of live images 	
Error compensation	<ul style="list-style-type: none"> • Linear (LEC) and segmented linear (SLEC) over up to 200 points • Squareness calibration; matrix compensation (NLEC) over up to 99 x 99 points 	
Data interface	1x Ethernet 100 MB/1 Gbit (RJ45); 3x USB 2.0 hi-speed (type A)	
Other connections	<ul style="list-style-type: none"> • Camera connection¹⁾ (USB 2.0 Hi-Speed (type A), Ethernet 1 Gbit (RJ45)) • Light control for up to 6 light sources 	
Accessories	Multi-Pos and Duo-Pos tilting bases, Multi-Pos holder, power cable, calibration standard, 2-D demo part, adapter connector (assignment of HEIDENHAIN TTL to RSF TTL and Renishaw TTL)	
Power connection	AC 100 V to 240 V (±10 %), 50 Hz to 60 Hz (±5 %), ≤ 79 W	
Operating temperature	0 °C to +45 °C (storage temperature –20 °C to +70 °C)	
Protection EN 60 529	IP 65, back panel IP 40	
Mounting	Multi-Pos or Duo-Pos tilting base; Duo-Pos holder; Fastener systems compatible to VESA MIS-D 100	
Mass	Unit with Multi-Pos tilting base: ≈ 4.5 kg; Duo-Pos tilting base: ≈ 3.8 kg; Unit with Multi-Pos holder: ≈ 4.1 kg	

¹⁾ Supported camera manufacturer: IDS Imaging Development Systems GmbH;
camera resolution: ≤ 2.0 megapixel, list of released cameras on the Internet at www.heidenhain.de

QUADRA-CHEK 3000

– Functions


Recording measuring points

The QUADRA-CHEK 3000 enables you to record points on flat 2-D contours either manually with crosshairs or automatically, depending on the option installed. The integrated measuring point acquisition over video edge detection (VED software option) is particularly helpful. Here the video image is displayed in real-time. The evaluation electronics even assume complete control of the illumination.



Video edge detection

The VED option provides you with multiple tools for edge detection and specifying measuring points. You can record the points manually or automatically. With the VED automatic measuring point acquisition, you need only approach the position—the active tool automatically finds the actual edge. This objective point measurement permits a high degree of repeatability. This makes it possible for you to work quickly, reliably and effortlessly, while at the same time maintaining a low degree of measurement uncertainty.

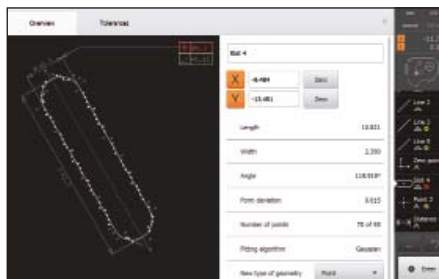

Functional features view

The QUADRA-CHEK 3000 offers you a comprehensive graphic feature view. In this view you can use previously measured geometries to design new geometry features.

Of course you can enlarge this view, reduce it, and zoom into features to keep a good overview of all measured geometry features.



Generating geometry features

The QUADRA-CHEK gives you several possibilities for determining geometries:

- Measuring geometry features
- Designing features from previously measured features (e.g. distance between two circle centers; angle between lines.)
- Defining unmeasurable geometry features

You can also have the generated geometry features inspected with a tolerance test.




Tolerancing

With the tolerance-adapting function you can define geometric tolerances for measured or designed elements. Dimensional, positional and form tolerances can be specified depending on the selected feature. You can use general tolerancing as per ISO 2768 or decimal tolerancing.



Creating a measuring program

For difficult or repetitive measuring tasks, you can automatically record all working steps as a measuring program. The QUADRA-CHEK learns the datums, the sequence of measurements, tolerances and data-output commands. The QUADRA-CHEK visually leads you to the features to be probed when the program is run. The program view always provides you with an optimum overview of the process.

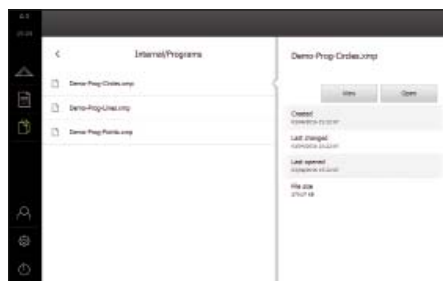


Log measured data

With the integrated measurement report function you can automatically create a report immediately after the measurement. The report contains measured and tolerance results as well as further information. With the template designer you can create individually configured reports. You select a standard template and adapt it to meet your needs, or you can create entirely new templates. You can save your logs in the QUADRA-CHEK in the log format, as .pdf or .csv files, or print them out over a peripheral printer or network printer.




Data interfaces


You use the data interfaces to output logs as well as to read and transmit settings and measuring programs. The Ethernet interface enables communication with a PC. You can connect printers or memory media to the USB port. Network drives and printers can also be connected via Ethernet. A list of possible printers is available on the Internet at www.heidenhain.de

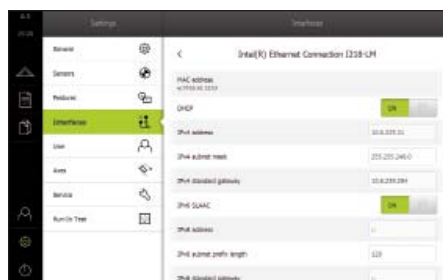


Examples of design capabilities:

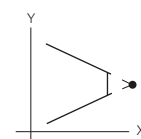


Intersection of two lines

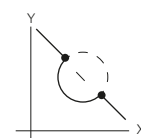


Intersection of line and circle

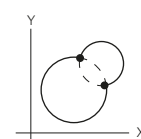


Intersection of two circles

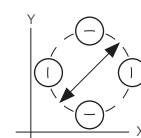


Bolt hole circle formed from three or more circles

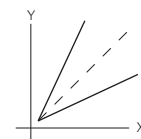


Bisector of two lines

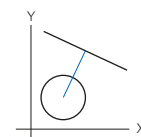


Line designed from line and circle

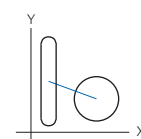


Line designed from circle and oblong hole

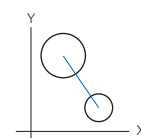


Distance designed from two circles

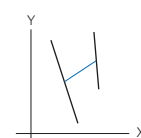

Distance designed from two lines

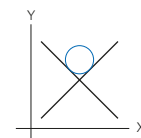

Circle designed from two lines

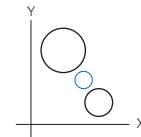

Circle designed from two circles

IK 5000 QUADRA-CHEK

–The universal PC package solution for measuring machines

IK 5000 QUADRA-CHEK, the universal PC package solution for 2-D and 3-D measuring tasks, is equally suitable as initial equipment on a machine as well as for retrofitting. It is available in versions for three or four axes, and the optional expansions make it ready for all coordinate measuring technology applications and for video measuring microscopes. You can use it to measure two- and three-dimensional geometries and their relationships.

Execution

The IK 5000 QUADRA-CHEK consists of the IK 5000 slot card for the PC as well as the additional necessary slot covers and the corresponding PC software. Once installed on your PC you will have a powerful measuring station.


System requirements

The following is necessary for running QUADRA-CHEK (values for 3-D profiling option in *italics*):

- PC \geq Dual-Core Pentium; 2.66 GHz (*Quad-Core Pentium; 2.8 GHz*)
- Operating systems: Windows Vista, 7, 8, and 10 (32-bit/64-bit)
- RAM \geq 1GB (*2GB*)
- Hard disk with at least 500MB (*1GB*) free
- One PCIe slot and one, two or three additional empty slots, depending on the version
- Screen resolution:
At least 1024 x 768 pixels
- Windows administrator rights for installation, setup and updating

Configuration

Various versions of the IK 5000 are available. Please see the configuration table for the model designations and various functions supported.

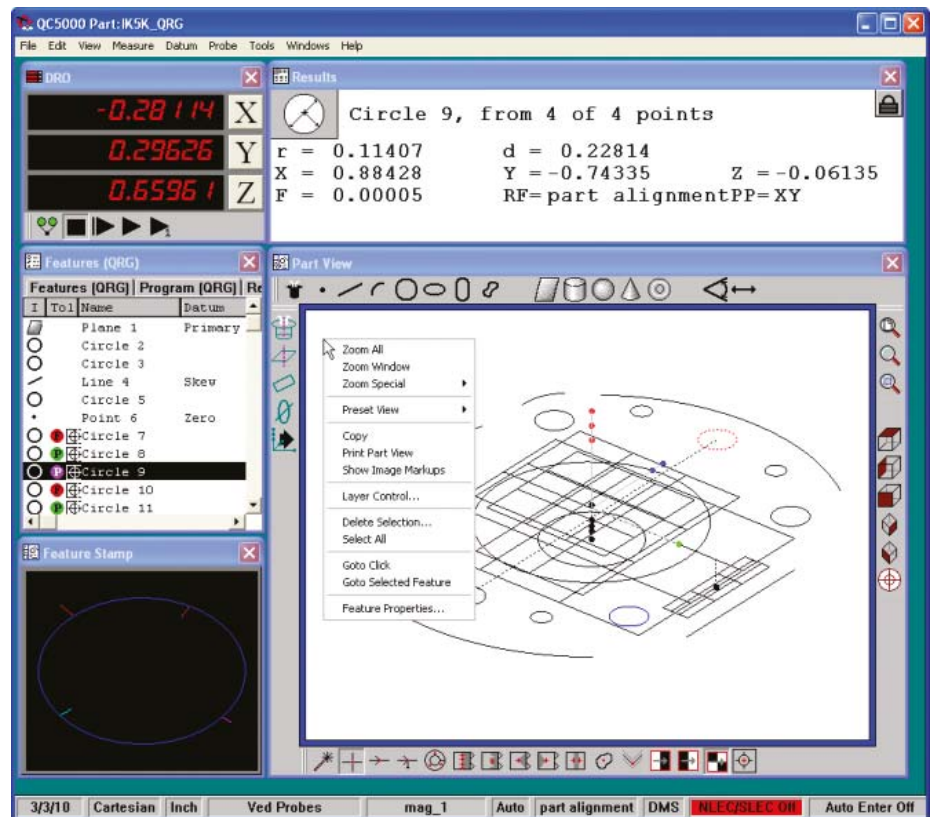

User interface

The IK 5000 QUADRA-CHEK screen shows various configurable windows and tool fields for clear and simple operation.

The **Part View** window shows the measured features with the accepted measuring points. You can also define relationships here.

In the **Live View** (only for versions with video evaluation) you can see a real-time display of the video image.

The **Template** window lists all measured features, relationships and constructed features together with their values and tolerances in tables.

The feature currently being measured is shown in the **Feature Stamp** window. The **Results** window contains all corresponding information.

The **DRO** window shows you the current measuring position.

	IK 5294	IK 5293	IK 5394		IK 5493	IK 5494	
Axes	4 XYZQ	3 XYZ	4 XYZQ	4 XYZQ	3 XYQ	4 XYZQ	4 XYZQ
2-D geometries	●	●	●	●	●	●	●
3-D geometries	–	●	–	●	–	–	●
Optical edge detector	–	–	●	–	●	–	–
Video evaluation	–	–	–	●	–	●	●
Zoom and light control	–	–	–	●	–	●	●
Autofocus	–	–	–	–	–	●	●
Touch probes	–	●	–	●	–	–	●
3-D profiling	–	Optional	–	Optional	–	–	Optional
CNC function	–	–	–	–	●	●	●



	IK 5000
Axes ¹⁾	3 (XYQ), 3 (XYZ) or 4 (XYZQ)
Encoder inputs* Input frequency	\sim 1 V _{PP} or \square TTL (other interfaces upon request) \sim 1 V _{PP} : differential \leq 1.5 MHz; \square TTL: differential \leq 3 MHz; Single-ended \leq 2.5 MHz
Subdivision factor	Up to 100-fold, selectable via dip switch; default setting: 50-fold (only for 1 V _{PP})
Display step ²⁾	Adjustable, max. 7 digits <i>Linear axes XYZ: 1 mm to 0.0001 mm; angular axis Q: 1° to 0.0001° (00° 00' 01")</i>
Display	By PC screen
Functions	<ul style="list-style-type: none"> • Measurement of two-dimensional features (2-D) • Measurement of three-dimensional features (3-D)¹⁾ • Point measurement with crosshairs • Programming of features and parts • Measure Magic: automatic recognition of geometries • Graphic display of measurement results • Entry of tolerances
Edge finder ¹⁾	<ul style="list-style-type: none"> • Automatic point measurement via optical edge finder
Video ¹⁾	<ul style="list-style-type: none"> • Automatic point measurement via video edge detection • Manual autofocus • Show live images • Archiving and output of live images • Zoom and light control, programmable (with the <i>Light/Zoom</i> versions) • Video connection for digital USB camera (with the <i>Video</i> versions) • Light control over six light sources and zoom control (for version with <i>Video</i> and <i>Light/Zoom</i>)
CNC ¹⁾	<ul style="list-style-type: none"> • Automation of measurement tasks • Axis control (for XYZQ) for servo and stepper motors • Autofocus via stepper-motor control (Z axis) • CNC outputs and inputs for joystick
3-D profiling ¹⁾ (option)	<ul style="list-style-type: none"> • Importing of CAD models • Probing of tested object and comparison with the CAD model • Flexible output of measurement results
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over any number of points • Squareness calibration • Matrix compensation over any number of points
Other connections	<ul style="list-style-type: none"> • Foot switch for two functions
Accessories	Foot switch, fiber-optic cables, holder for fiber-optic cables, amplifier, calibration standard, demo part, distribution cable
PC interface	PCIe
Operating temperature	0 °C to 55 °C; (storage temperature -30 °C to 70 °C)
Dimensions	130 mm x 250 mm

* Please select when ordering

¹⁾ See the configuration table for possible combinations

²⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

IK 5000 QUADRA-CHEK

– Functions

The innovative operator guidance provides self-explanatory information about the various functions. It already supports you while setting up the coordinate system (aligning the part and specifying the datum).

Various predefined features are available for measurement, depending on the version:

2-D measurement: Point, line, circle, slot, rectangle

3-D measurement: Plane, cylinder, cone, sphere

The “Measure Magic” function makes measurement especially easy: it selects that feature which best matches the shape implied by the points probed.

The IK 5000 QUADRA-CHEK enables you to define your own contour features (e.g. a circle exactly defined by its position and dimensions). In addition, you can establish relationships (distances, angles) between features.

Measuring programs that you create yourself or record automatically simplify the efforts necessary for repeated parts. The evaluation electronics graphically take you to the next measuring position during program run.

Depending on the version, the IK 5000 QUADRA-CHEK probes the points of plane (2-D) contours either automatically or manually via crosshairs, optical edge detection, or a video camera.

For 3-D contours such as planes, cylinders, cones, and spheres you can measure points using a triggering touch probe. If a triggering touch probe is used, the values are transferred automatically. With rigid probing elements a key must be pressed.

The measured features can be clearly displayed either in three dimensions or in one of the three projection planes.

Multi-sensor scanning

Along with the usual method for measuring points, the IK 5494 and IK 5594 versions permit multi-sensor scanning: in addition to the video camera, the measuring machine is also equipped with a touch probe. You can then use the touch probe to measure 3-D features on the object and enjoy the advantages of video evaluation for 2-D features. The integrated probe library manages the various measurement tools for you, whether they be optical, video, laser or touch-probe systems.

Constructed features

QUADRA-CHEK gives you several possibilities for determining dimensions:

- Measuring the features
- Calculating features (e.g. center of a measured circle)
- Relating features to one another (e.g. distance between two circle centers; angle between lines.)





However, you can also construct new features from existing features and from relationships. The properties of these constructed features can then be seen directly in the parts view.

Data management

The integrated data-report generator for customized forms, databases and tolerance checks is used to archive, export and import data in numerous formats. Use the integrated calculation tables for complex, non-standard calculations. Simply send your customized reports to a printer, or make the data available to other users in a database.


Functional Part View window

QUADRA-CHEK provides you with a comprehensive, graphical Part View window. You can choose between a 3-D view, or a projection in the XY, YZ or ZX planes. Additionally, you can magnify, reduce, zoom, shift or rotate the views. You can define tolerances and designed features in any view. The “pass/fail” color coding makes it easy to determine whether the part matches the specifications.

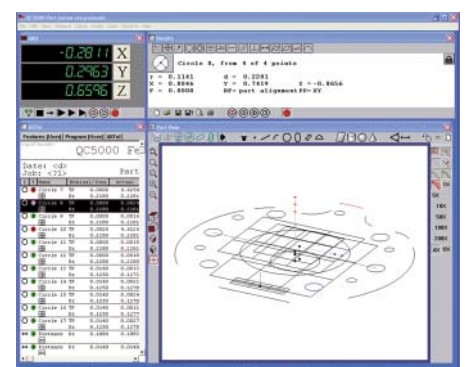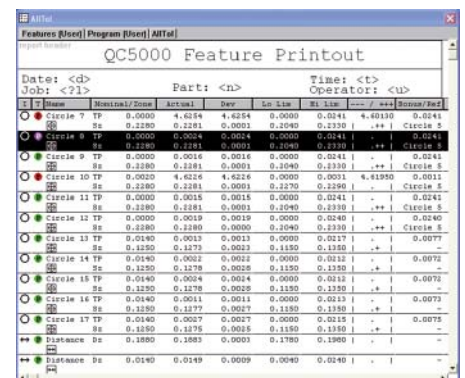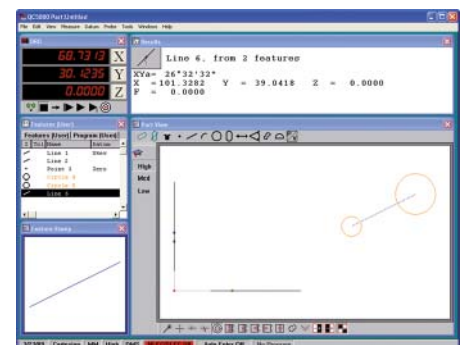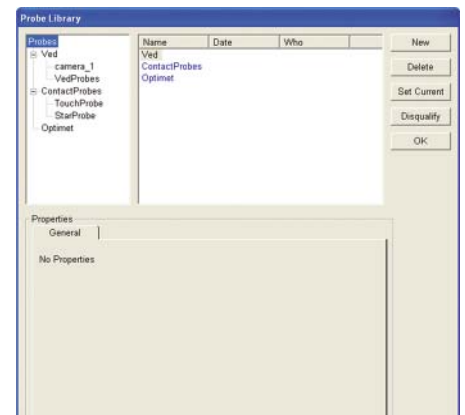


Programming of parts

Difficult and repetitive measuring tasks can be simplified with the aid of a program that you either create yourself or record automatically during measurement of the first part. QUADRA-CHEK learns the reference points, the sequence of measurements, tolerances and data-output commands. QUADRA-CHEK visually leads you to the features to be probed when the program is run. The program view also provides you with an optimum overview of the process.

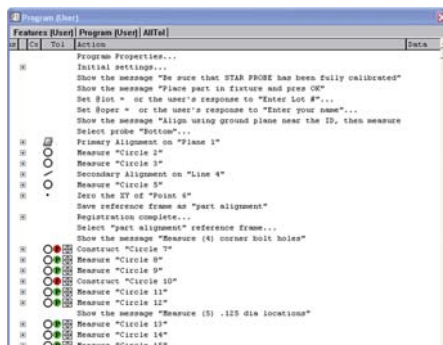

Integrated image processing


In the versions with video functions, the integrated image editing is particularly useful: here the video image is displayed on screen and saved in real-time. QUADRA-CHEK can even assume complete control of the illumination and the motor zoom. A digital USB camera can be connected.

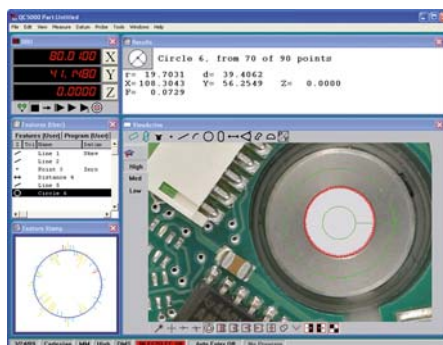

In order to quickly and directly compare the actual status and nominal status, import the parts drawing in DXF or IGES format, and place it over the video image.

Axis positioning

The CNC versions of IK 5000 QUADRA-CHEK work as full-fledged controls, directly controlling the positioning of the X, Y, Z and Q axes. Servo motors or stepper motors can be connected. Amplifiers with two or three axes for stepping motors are available as accessories.

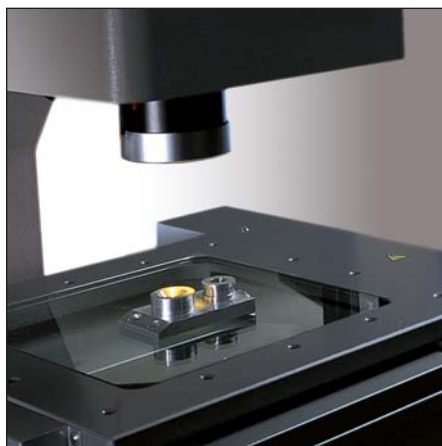


Automating

Programs running in combination with the CNC function of IK 5000 QUADRA-CHEK run automatically. This minimizes the effects of subjective assessments, and increases data throughput noticeably. By automating series of measurements and complex procedures, you spare yourself the strain of performing repetitive measuring tasks.


3-D profiling

The 3-D profiling option simplifies the measurement and evaluation of 3-D contours on multi-sensor and tactile measuring machines: First you import the CAD model, then you measure the real part, and finally you use the 3-D profiling function to compare the measured points with the CAD model. The measurement results are displayed graphically and can be managed in the usual manner. They can also be transferred to other quality systems.

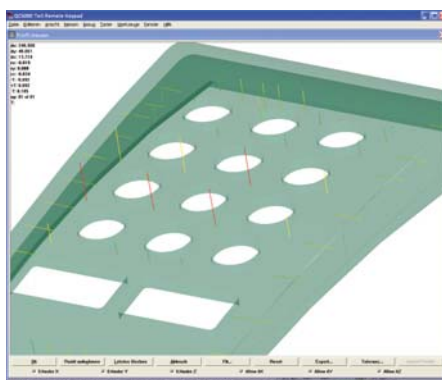


Examples of design capabilities:


2-D possibilities

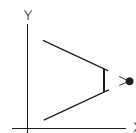


Intersection of two lines

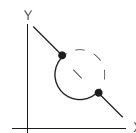


Intersection of line and circle

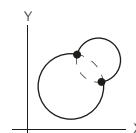

Intersection of two circles

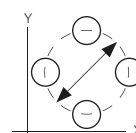


Bolt hole circle formed from three or more circles

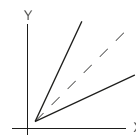


Bisector of two lines


3-D possibilities

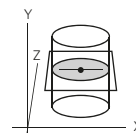


Intersection of cylinder and surface

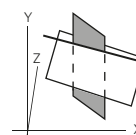

Plane from plane and 3-D line

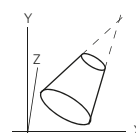

Taper angle

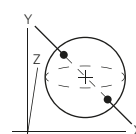

Intersection of sphere and line

ND 287

–The evaluation unit for measuring and testing stations

Thanks to its wide range of functions, the ND 287 evaluation unit for one axis is predestined for measuring and inspection stations, but is also intended for simple positioning tasks. The universal encoder input permits connection of all incremental encoders with 11 μA_{PP} and 1 V_{PP} signals and absolute encoders with the EnDat 2.2 interface from HEIDENHAIN.

Execution

The ND 287 features a sturdy aluminum die-cast housing. A graphic TFT monitor displays the measured values, the status and the soft-key row. The splash-proof full-travel keyboard is built for the workshop.

Functions

The **ND 287** features numerous functions for measuring and processing individual positions, for example sorting and tolerance check mode, minimum/maximum value storage, measurement series storage. These data make it possible to calculate mean values and standard deviations and display them in histograms or control charts. With its modular design, the ND 287 permits connection of a second encoder for sum/difference measurement or of an analog sensor, for example for temperature compensation. The **ND 280** was conceived to perform simple measuring and positioning tasks (see the brochure **Digital Readouts and Linear Encoders for Manually Operated Machine Tools**).

Data interfaces


The ND 287 has serial interfaces for measured value transfer to a PC or printer, for input/output of parameters and compensation value lists, and for diagnostics:

- USB
- RS-232-C/V.24
- Ethernet 100BaseT (option)

The measured value transfer can be started at the ND keyboard, through an external command, through the RS-232-C/V.24 software command CTRL B, or by an adjustable internal clock.

Sorting and tolerance checking

With the sorting function of the ND 287, workpieces can be inspected for dimensional accuracy and divided into classes. The result is indicated in the status display in color or with symbols; in addition, a corresponding signal is available at the switching outputs.

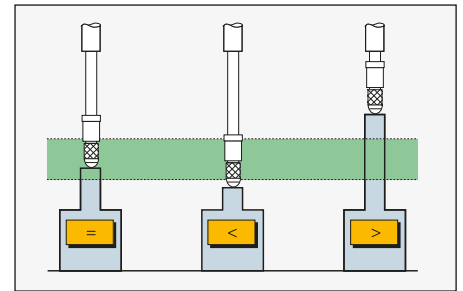


Sorting and tolerance checking

Display freeze

To be able to read the display reliably in spite of quickly changing values you can send an external signal to hold the display. The true position value is counted internally.

Combination with a second encoder

A second encoder or a sensor on the ND 287 can be connected through an optional **encoder module** or **analog module** input assembly. The data from two encoders can be combined through mathematical operands. The result and the two measured values are saved. This permits further areas of application, such as the sum/difference display of two encoders or temperature compensation through a temperature sensor.

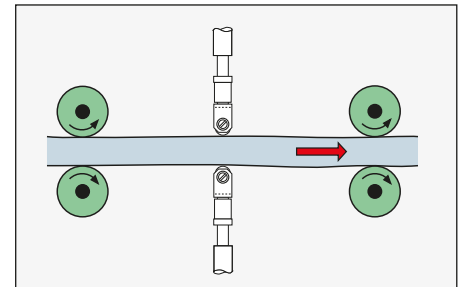


Sum measurement

Recording and evaluating series of measurements

The ND 287 provides a measured-value memory for recording series of measurements. The measurement value, minimum, maximum or difference can be displayed during the serial measurements. In addition, the displayed value can be checked with the classification function for compliance to tolerances. The saved measured values are evaluated and represented as:

- Statistical view (mean value \bar{x} , standard deviation s , and range r)
- Diagram (graphical display of the measured values with minimum/maximum and mean values as well as tolerance limits)
- Measured value overview as a table

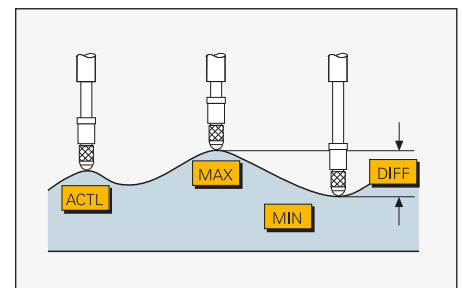


Measured value acquisition

Statistical Process Control (SPC)

For SPC, the ND 287 saves up to 1000 measured values in a nonvolatile FIFO memory. They are evaluated with the following functions:

- Statistical view of measured values in the FIFO memory
- Measured value overview as a table
- Diagram of the last 30 measured values
- Histogram in ten classes with probability density function and process capability indexes c_p and c_{pk} .
- Control charts for mean value \bar{x} , standard deviation s , and range r

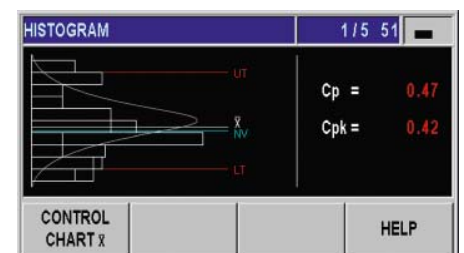



	ND 287
Axes	1; option: second input through encoder module
Encoder inputs Input frequency	$\sim 1 V_{PP}$; $\sim 11 \mu A_{PP}$ or EnDat ¹⁾ (automatic interface detection) $\sim 1 V_{PP}: \leq 500 \text{ kHz}$; $\sim 11 \mu A_{PP}: \leq 100 \text{ kHz}$
Subdivision factor	4096-fold
Display step ²⁾	Adjustable, max. 9 digits <i>Linear axis:</i> 0.5 μm to 0.002 μm ; <i>angular axis:</i> 0.5° to 0.00001° (00° 00' 00.1")
Analog input	Option: $\pm 10 \text{ V}$ through analog module; resolution 5 mV
Display	Color flat-panel display for position values, dialogs and inputs, graphic functions and soft keys
Functions	<ul style="list-style-type: none"> • REF reference-mark evaluation for distance-coded or single reference marks • 2 reference points • Distance-to-go mode • Remote operation via serial interface • Sorting and tolerance checking • Measurement series with min./max. value storage • Storage of measured values (max. 10 000) • Functions for statistical process control (SPC) • Graphic depiction of distribution/histogram • Sum/difference display (with 2nd encoder module) • Thermal compensation (with analog module)
Axis-error compensation	<i>Linear axis:</i> Linear, and segmented linear axis over up to 200 points <i>Angular axis:</i> Segmented linear with 180 compensation points (every 2°)
Data interface	RS-232-C/V.24; USB (type B); option: Ethernet 100BaseT, via Ethernet module
Switching outputs For tasks in automation	<ul style="list-style-type: none"> • Zero crossover; trigger points 1 and 2 • Sorting signals "<" and ">" • Error
Switching inputs For tasks in automation	<ul style="list-style-type: none"> • Zero reset, preset • Cross over reference point and ignore reference signals • Measured value output or display freeze • Start measurement series • Minimum/maximum/difference display • Gating of the two encoder inputs • Sum or difference display • Display measured value 1 or measured value 2
Accessories	Mounting adapter, encoder module, analog module, Ethernet module
Power connection	AC 100 V to 240 V (–15 % to +10 %), 48 Hz to 62 Hz; 30 W
Operating temperature	0 °C to 50 °C; (storage temperature –40 °C to 85 °C)
Protection EN 60529	IP 40, front panel IP 54
Mass	$\approx 2.5 \text{ kg}$

¹⁾ Purely serial, no evaluation of incremental signals

²⁾ Depends on the signal period of the connected encoder (display step \approx signal periods/4096)

ND 1100 QUADRA-CHEK

– The evaluation unit for simple positioning tasks

The ND 1100 QUADRA-CHEK evaluation units can support up to four axes. They are mainly suited to positioning tasks on positioning equipment and measuring fixtures, as well as for retrofitting on measuring machines for data acquisition and relaying to a PC.

Execution

The ND 1100 QUADRA-CHEK evaluation electronics have a monochrome flat-panel screen for displayed values, dialogs, inputs and soft keys. The robust, die-cast aluminum enclosure meets the demands of metrology and production control.

Functions

The logical placement of the function keys and soft keys permits innovative operator guidance, which supports you when using the diverse functions.

Along with the usual functions of evaluation electronics, such as zeroing and setting of reference values, the ND 1100 QUADRA-CHEKs have numerous other useful functions:

- Each axis can be configured for linear or angular display
- Minimum/maximum value storage
- Simple switching between counting directions
- Continuous data output via internal clock, or upon probing

Data interfaces

You use the data interfaces to output measured points as well as to save settings and compensation values. The ND 1100 has an RS-232-C/V.24 serial interface for communication with a PC. You can connect printers or memory media directly to the USB port.

A list of possible printers is available on the Internet at www.heidenhain.de

Display format

Depending on the type of encoder connected, you can define linear or angular display individually for each axis.

X	14.5653			
Y	-8.2776			
Z	20°30'50"			
Q	324°55'30"			
Abs	MM		Menu	Preset


Minimum/maximum value storage

The ND 1100 is capable of minimum/maximum value storage in any selectable axis. The largest and smallest measured values of a measurement series as well as the difference are stored and can be output via the data interface. This function is particularly advantageous during concentricity testing.

MinMax				
MAX				
X	14.7653			
MIN				
X	14.5653			
RANGE				
X	0.2000			
Both	MAX	MIN	New	Preset

Touch-probe connection

The ND 1100 units feature a connection for touch probes (e.g. from HEIDENHAIN or Renishaw). The evaluation unit automatically reads the current position value during probing, and also takes the radius of the stylus into account.

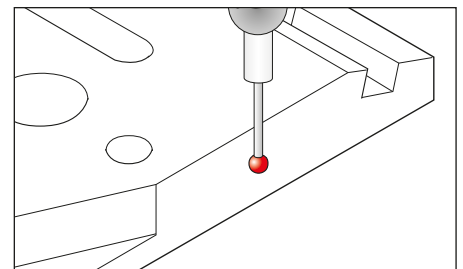

Output format of measured values

Since the universal output formats are used by various manufacturers of measuring machines, the ND 1100 can easily be retrofitted as a data logger to manually operated measuring machines. The measured values are captured by the ND and then relayed to a connected PC for further processing.

X	12.3553 mm
Y	-8.2006 mm
Z	20.30.50 dms
Q	326.37.30 dms



	ND 1102	ND 1103	ND 1104
Axes	2	3	4
Encoder inputs* Input frequency	\sim 1 V _{PP} or \square TTL (other interfaces upon request) \sim 1 V _{PP} : \leq 275 kHz; \square TTL: \leq 3 MHz		
Subdivision factor	10-fold (only at 1 V _{PP})		
Display step ¹⁾	Adjustable, max. 7 digits <i>Linear axis:</i> 1 mm to 0.0001 mm <i>Angular axis:</i> 1° bis 0,0001° (00° 00' 01")		
Display	5.7" monochrome flat-panel display for position values, dialogs and inputs, and soft keys		
Functions	<ul style="list-style-type: none"> • Measurement series with min./max. value storage • Difference between minimum and maximum (range) • Scaling factor 		
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 300 points • Squareness calibration 		
Data interface	<ul style="list-style-type: none"> • RS-232-C/V.24 • USB (type A) 		
Touch-probe connection*	HEIDENHAIN or Renishaw touch probe		
Other connections	Foot switch for two functions, or remote keypad		
Accessories	Foot switch, remote keypad, protective cover, tilting base, mounting adapter		
Power connection	AC 100 V to 240 V (–15 % to +10 %), 47 Hz to 63 Hz, \leq 100 W		
Operating temperature	0 °C to 45 °C; (storage temperature –20 °C to 70 °C)		
Protection EN 60529	IP 00, front panel IP 40		
Mounting*	Tilting base or mounting base		
Mass	ND with tilting base: \approx 4.8 kg; ND with mounting adapter: \approx 2 kg		

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

ND 2100 G GAGE-CHEK

– The evaluation unit for multipoint inspection apparatuses

The ND 2100 G GAGE-CHEKs are versatile metrology displays for measuring and inspection tasks in manufacturing and quality assurance. With inputs for up to eight encoders, they are predestined for multipoint measurements from simple pass/fail detection up to complex SPC evaluation.

Execution

The ND 2100 G evaluation units have a robust, die-cast aluminum enclosure, and a keyboard suited to their environment. A large, graphic, color screen displays the measured values, the soft-key row and other information.

Functions

The inputs can be assigned and combined as desired with mathematical, trigonometric or statistical formulas. This makes it possible to measure even complex dimensions such as thickness, flatness, volume and more. The results are displayed numerically or graphically as a color bar graph or a dial, or archived for statistical process control (SPC). The GAGE-CHEK can be configured for basic or advanced applications. Soft keys and hot keys can be adapted as required. The minimum/maximum function of the ND 2100 G evaluation unit monitors and stores the highest and lowest measured or calculated value. Warning and tolerance limits can be assigned to each display value. Results outside of the tolerance are marked with a different color. An acoustic alarm sounds simultaneously. Tolerance values, SPC parameters and custom formulas are stored for individual parts. GAGE-CHEK can thus manage up to 100 parts with up to 16 visible and 16 invisible measurands. The rapid acquisition of measurement data makes the monitoring of dynamic events, such as the eccentricity of a rotating shaft, possible.

Data interfaces


The GAGE-CHEK features various interfaces for communicating with parent systems:

- RS-232-C/V.24 for PCs, also for remote operation of the GAGE-CHEK
- USB

A list of possible printers is available on the Internet at www.heidenhain.de


DRO view

The display values appear in large, easy-to-read numbers. Values outside the tolerance are color-coded, immediately notifying you of errors.

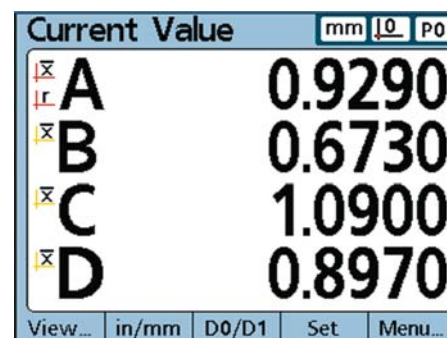

Bar diagram

You can select to have the values shown as a color-enhanced vertical or horizontal bar graph. The defined warning limits and tolerance limits provide instant feedback. If these limits are exceeded, the color of a bar changes from green to yellow or red, informing you explicitly of critical dimensions.

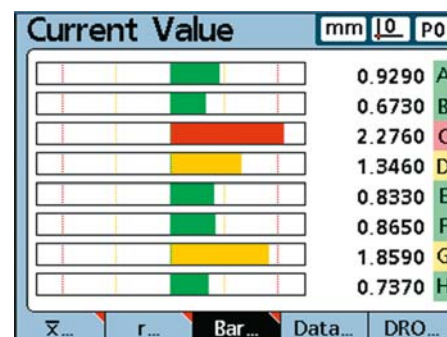


SPC and data storage

GAGE-CHEK includes integrated SPC studies such as mean value charts (X bar) and range charts (R). Min, max, sigma, cp and cpk are also calculated, and are clearly displayed as a graph or histogram. Historical raw data can be saved in a tabular numeric display. Each dimension and all data are time and date stamped.

10:39:14 AM 4-29-06				
#90 0.5665				
A	B	C	D	
0.5665	0.8900	0.4045	-0.4045	A
0.8900	1.3755	-0.2425	-0.7280	
-0.2425	1.3755	0.0810	-0.5665	B
0.2425	-0.5665	-0.5665	0.0810	
0.5665	-0.8900	-0.8900	0.7280	
1.0520	-1.3755	-1.0520	0.7280	C
1.0520	-1.3755	-0.8900	0.4045	
1.3900	-0.7280	-1.2135	-1.0520	
0.8900	-0.0810	-1.5370	-0.7280	D
1.2135	-0.2425	-1.6990	-0.7280	

Formulas and combinations

You can use mathematical and trigonometric formulas, as well as logical conditions, to combine individual measured values or measurement sequences with each other, and so create complex calculations. This can be used, for example, to calculate and display the circumference of a turned part, the volume of a cube, or the angle between two cams, and also to assign tolerance limits to these values.

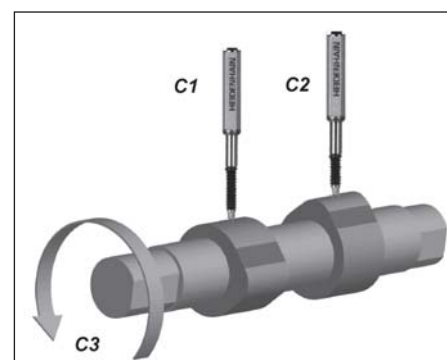



	ND 2104 G	ND 2108 G
Axes	4	8
Encoder inputs* Input frequency	$\sim 1 V_{PP}$ \square TTL or EnDat 2.2 (other interfaces upon request) $\sim 1 V_{PP}: \leq 275 \text{ kHz}$; \square TTL: $\leq 3 \text{ MHz}$	
Subdivision factor	10-fold (only at 1 V_{PP})	
Display step ¹⁾	Adjustable, max. 7 digits Linear axis: 1 mm to 0.00001 mm Angular axis: 1° bis 0,0001° (00° 00' 01")	
Display	5.7" color flat-panel display for position values, dialogs and inputs, graphic functions and soft keys	
Functions	<ul style="list-style-type: none"> • Part programming for up to 100 parts • Graphic display of measurement results • Sorting and tolerance checking using tolerance and warning limits, with display as a bar graph • Measurement series with min./max. value storage • Mathematical and trigonometric formulas • Functions for statistical process control (SPC) • Graphic display of measurement results and distribution • Data storage of values and formulas • Convenient diagnostics of the connected encoders (only EnDat 2.2) 	
Error compensation	<ul style="list-style-type: none"> • Linear, and segmented linear over up to 60 points 	
Data interface	<ul style="list-style-type: none"> • RS-232-C/V.24 • USB (type A) 	
Switching inputs	5 TTL inputs (freely definable)	
Switching outputs	12 TTL outputs (freely definable)	
	2 relay outputs	
Other connections	Foot switch for two functions, operating panel	
Accessories	Foot switch, remote keypad, protective cover, tilting base, mounting adapter	
Power connection	AC 100 V to 240 V (–15 % to +10 %), 47 Hz to 63 Hz; $\leq 100 \text{ W}$	
Operating temperature	0 °C to 45 °C; (storage temperature –20 °C to 70 °C)	
Protection EN 60529	IP40	
Mounting*	Tilting base or mounting base	
Mass	ND with tilting base: $\approx 4.8 \text{ kg}$; ND with mounting adapter: $\approx 2 \text{ kg}$	

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder as well as the subdivision factor

MSE 1000

–The modular evaluation unit for multipoint inspection apparatuses

The MSE 1000 modular evaluation unit with its modular design has been specially conceived for multipoint inspection apparatuses and shop-floor metrology. At the same time, such measuring apparatuses—which can be designed as stations for statistical process control (SPC)—also serve for statistical evaluation of the measured values and thus permit a qualified process control. They can be equipped with a large number of differing measuring devices.

The MSE is especially attractive for these areas of application for the following reasons:

- Flexibility for adaptation to differing conditions of operations
- A variety of interfaces for connection of numerous measuring devices
- Fast communication with higher-level computer systems over Ethernet
- Outputs for controlling sorting switches, warning lamps, PLC, etc.
- Output of measurement results for documentation and further processing

Design

The MSE 1000 consists of individual modules with various interfaces. They permit connection of incremental, absolute and analog measurands, the output of switch signals, and communication over diverse interfaces. The basic configuration of the MSE 1000 consists of a power module and a basic module. It can be expanded by further modules as needed. Users can configure up to 250 axes or channels to meet their specific needs.

Functions

The functions of the MSE 1000 are defined by the PC software used.

MSEsetup

This software package is available for download at www.heidenhain.de. It handles the basic functions of the MSE 1000:


- Configuration (modules, encoder inputs, data transmission)
- Diagnostics
- Data transfer to the PC
- Writing the measured values to an Excel table

MSElibrary


This program library (DLL) for Windows operating systems is needed if the MSE 1000 is to be operated through a customer-specific software application. The Ethernet driver provides functions that permit communication between the MSE 1000 and a PC.

The interfaces in C/C++ make application development possible using Visual Studio C/C++, Visual Basic and Delphi. Also available as a LabView virtual instrument (VI).

MSElibrary is also available for download at www.heidenhain.de.

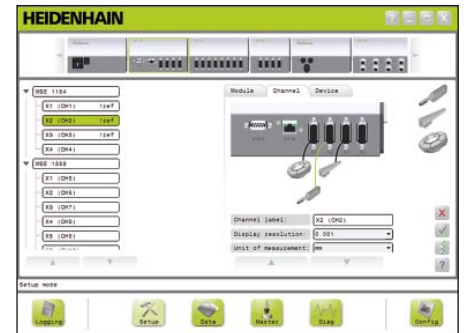

Configuration of the channels

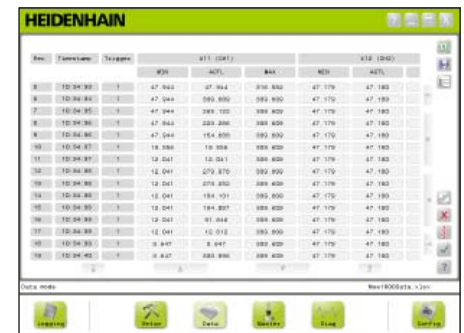

Data acquisition



Diagnostics of 1 V_{PP} signals



Functional reserve for EnDat units



	MSE 1000
Measuring channels/axes	Up to 250
Data transfer rate	20 to 100 measured values per second for all axes; depends on the configuration
Data transfer	Standard Ethernet, IEEE 802.3
Addressing	Fixed IP address or DHCP
External latch inputs	2 (e.g. for foot switch)
Software	MSEsetup: Graphic-supported configuration of the system, diagnosis of the encoders, loading of measured data to Excel
	MSElibrary: Library (DLL) for integration in the customer's software under Windows
Voltage supply*	AC 100 V to 240 V ($\pm 10\%$), 50 Hz to 60 Hz ($\pm 2\%$), $\leq 108\text{ W}$ DC 24 V ($\pm 10\%$), $\leq 72\text{ W}$
Operating temperature	0 °C to 45 °C; (storage temperature -20 °C to 70 °C)
Degree of protection*	IP40 or IP65
Assembly	On top hat rail on mounting stand or in electrical cabinets (specially conceived for 19-inch cabinet)
Accessories	Mounting stand, foot switch, connecting cable

* Please select when ordering

MSE 1000

– Modules

Modules		Description	Interface	Connections	Width a	Power consumption ¹⁾	Model
Required	Basic	Basic unit with complete functionality • Ethernet 10/100 for connection to the PC • Encoder inputs • 2 latch inputs $\square\square$ TTL	4 encoders EnDat 2.2	M12, 8-pin, female	159 mm	3.5 W	MSE 1114
			4 encoders $\sim 1 V_{PP}$	D-sub, 15-pin, female		3.8 W	MSE 1184
			4 encoders $\square\square$ TTL	D-sub, 9-pin, female		2.7 W	MSE 1124
	Power supply	Supply unit Output power 50 W	AC 100 V to AC 240 V	Power plug (IP40)	159 mm	–	MSE 1201
				PG cable gland ³⁾ (IP65)			MSE 1202
Optional	EnDat	Axis module with bidirectional encoder interface (purely serial)	4 encoders EnDat 2.2	M12, 8-pin, female	106 mm	3.3 W	MSE 1314
			8 encoders EnDat 2.2		159 mm	4.4 W	MSE 1318
	Sinusoidal	Axis module for incremental encoders	4 encoders $\sim 1 V_{PP}$	D-sub, 15-pin, female	106 mm	3.5 W	MSE 1384
			8 encoders $\sim 1 V_{PP}$		159 mm	5.0 W	MSE 1388
	Square wave	Axis module for incremental encoders	4 encoders $\square\square$ TTL	D-sub, 9-pin, female	106 mm	2.4 W	MSE 1324
			8 encoders $\square\square$ TTL		159 mm	2.5 W	MSE 1328
	Analog	Axis module for analog inputs	2 inputs, $\pm 10 V$ or 4 to 20 mA	D-sub, 9-pin, female	106 mm	3.2 W	MSE 1332
	HBT	Axis module for the connection of inductive position encoders	8 inputs, half-bridge, Tesa and Solartron compatible	Lumberg, 5-pin, female	159 mm	4.6 W	MSE 1358
	LVDT		8 inputs, full bridge, Mahr or Marposs compatible				
	I/O	Floating inputs/outputs	4 relay outputs 4 TTL switching inputs	Terminal block (IP40)	106 mm	6.1 W ²⁾	MSE 1401
				M8, 3-pin, female ⁴⁾ (IP65)			
	Compressed air	Air switch for activation of pneumatic length gauges	1 input 1 output Compressed air	Plug-in connections for 4 mm tube	106 mm	3.7 W ²⁾	MSE 1501

Modules providing connection to further encoders and interfaces are planned.

¹⁾ Power consumption of the module. Connected encoders must be considered additionally; see the example calculation

²⁾ With outputs under load

³⁾ Three-meter power cable with PG gland included in delivery

⁴⁾ Three mating connectors included in delivery

Example calculation of power consumption

The power supply module (MSE 1201, MSE 1202) provides the electrical power for further modules and encoders. If the power provided does not suffice to operate the desired system configuration, a further power supply module must be used.

The power consumption is specified for each module (see table). The power consumption of the connected HEIDENHAIN encoders can be calculated from the brochure data (supply voltage x current consumption). For all other consumers (e.g. inductive and analog sensors), the connected load must be known. The sum power of all consumers must not exceed the rated power of the power supply module(s).

The following example illustrates this calculation.


Components to be supplied

- Encoders: 8 x ACANTO AT 1217, 12 x SPECTO ST 1288, 2 x LS 388C, 2 x temperature sensors 20 V/100 mA
- Modules: 1 x basic module MSE 1114, 1 x axis module MSE 1314, 2 x axis modules MSE 1388, 1 x compressed air module MSE 1501, 1 x axis module MSE 1332

Power calculation

	Data from brochure or calculated				Total power consumption (example)
	Operating voltage	Current consumption	Power consumption/unit	Number of units	
ACANTO AT 1217	5 V	150 mA	0.75 W	8	6 W
SPECTO ST 1288	5 V	90 mA	0.45 W	12	5.4 W
LS 388C	5 V	100 mA	0.5 W	2	1 W
Thermistor	20 V	100 mA	2 W	2	4 W
MSE 1114	–	–	3.5 W	1	3.5 W
MSE 1314	–	–	3.3 W	1	3.3 W
MSE 1388	–	–	5 W	2	10 W
MSE 1501	–	–	3.7 W	1	3.7 W
MSE 1332	–	–	3.2 W	1	3.2 W
Total:					40.1 W

This power consumption can be met by **one** MSE 1201 (50 W) or MSE 1202 (70 W) power supply module.

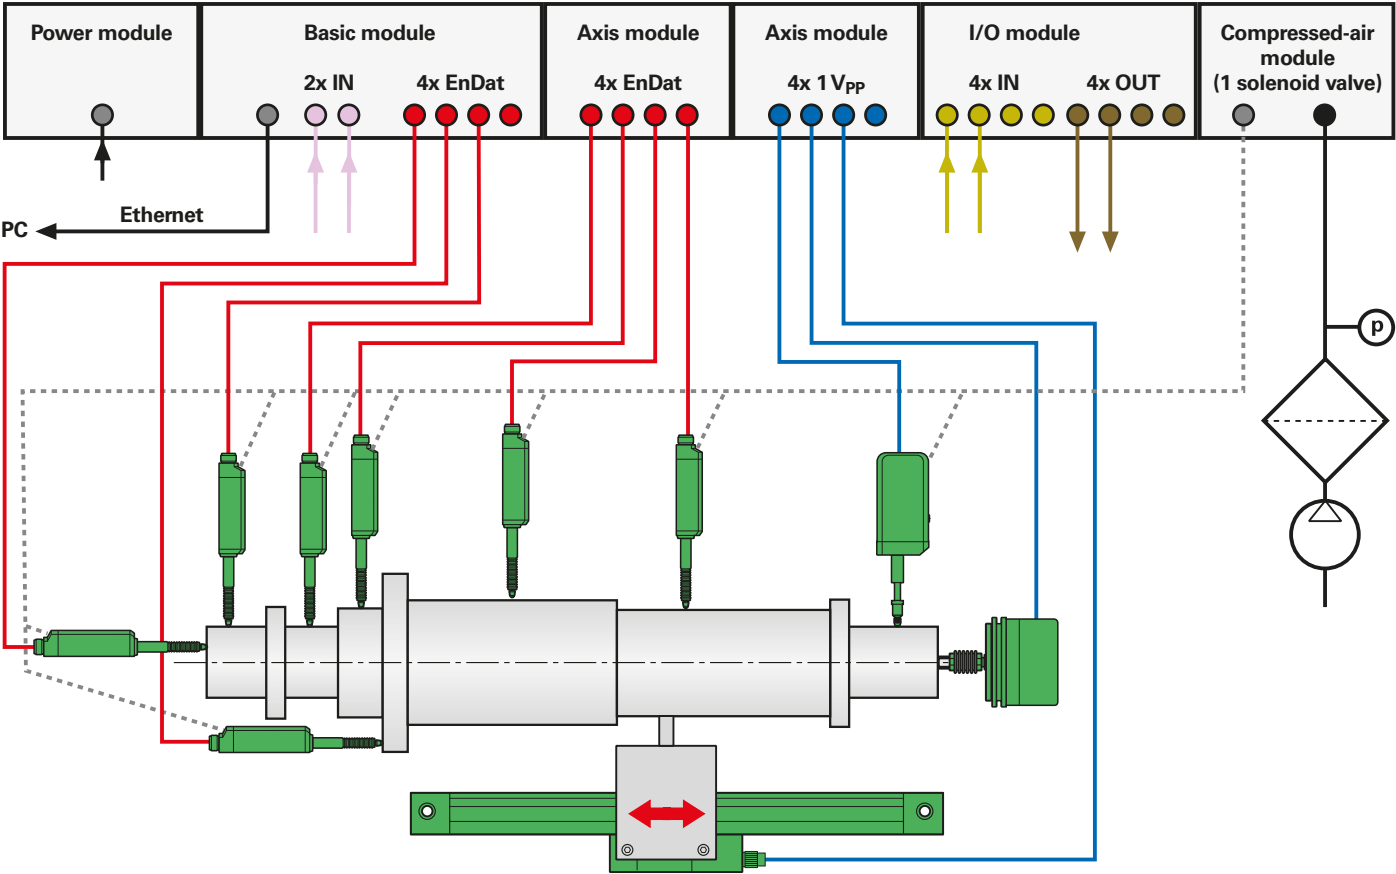

EIB 700

–The evaluation unit with measured-value memory

The EIB 700 evaluation electronics feature connections for four axes. They are ideal for precise position measurement in particular for inspection stations and multipoint inspection apparatuses as well as for mobile data acquisition, such as in machine calibration.

The EIB 700 series are ideal for applications requiring high-resolution encoder signals and fast measured-value acquisition. Ethernet transmission also enables you to use switches or hubs for connecting more than one EIB. It is also possible to use WLAN transmission, for example.

Execution

The EIB 700 features a bench-top housing. With an accessory mounting bracket it can also be easily built into a 19-inch housing. They are designed for the following voltage supplies:

EIB 741: 100 V AC to 240 V

EIB 742: 24 V DC

Functions

The EIB 700 subdivides the periods of the incremental signals up to 4096-fold for **measured-value generation**. The deviations within one signal period are automatically reduced by adjustment of the sinusoidal incremental signals.

The integrated **measured-value memory** enables the EIB 700 series to save typically 250 000 measured values per axis. Internal or external triggers can be used for axis-specific storage of the measured values. The **interval counter** permits position-dependent triggering in connection with an incremental encoder on axis 1. In addition, the signals of axis 1 are interpolated and forwarded to a position counter. Triggering pulses are generated either at a certain position or equidistantly in adjustable intervals. They begin after an adjustable start position has been traversed and continue in both counting directions. The trigger pulses can be used for triggering further EIB internal axes or also over a trigger output.

Data interface

A standard Ethernet interface using TCP/IP or UDP communication is available for **data**

output. This permits direct connection to a PC, laptop or industrial PC. The type of measured-value transfer can be selected through the operating mode (transfer of individual values, block transfer, or transfer upon software request).

Driver software for Windows, Linux and LabVIEW as well as example programs and the EIB application software are included in the items supplied, in order to **process the measured values** on the PC. The driver software enables customers to easily program their own applications. In addition, example programs demonstrate the capabilities of the EIB 700 series. The EIB application software serves for commissioning and demonstrating the capabilities of the EIB 700 series. This software is made available as source code and can serve as a platform for the development of one's own applications.

The **range of features** can be enhanced by updating the firmware.

Operating modes	Soft Realtime Mode	Recording	Streaming	Polling
Properties	Immediate transmission of measured values when the trigger event occurs	Storage of measured values in the EIB's internal measured-value memory	Buffering and block transfer of measured values	Software request from customer application
Selectable trigger sources	All internal and external sources			By software command
Trigger rate	≤ 10 kHz (access time to position values < 100 µs)	≤ 50 kHz	≤ 50 kHz Max. 1 200 000 bytes/s	Depends on the application
Typical applications	Closed loop control	Very high recording rate Offline analysis of data	High recording rate in combination with high recording depth	Quasi-static measured value recording



	EIB 741, EIB 742		
Encoder inputs	D-sub connections, 15-pin, female (X11 to X14), for four encoders		
Input signals (switchable)	$\sim 1 V_{PP}$ ($\sim 11 \mu A_{PP}$ upon request)	EnDat 2.1	EnDat 2.2
Voltage supply for encoders	DC 5.12 V ± 0.15 V; max. 450 mA per channel Overcurrent protection (automatic switch-off, resettable) at 550 mA		
Input frequency	≤ 500 kHz	–	–
Subdivision factor	4096-fold	–	–
Signal adjustment	Automatic adjustment of offset, phase and amplitude	–	–
Cable length ¹⁾	≤ 150 m	≤ 150 m	≤ 100 m
Data register for measured values	48 bits (only 44 bits are used)		
Interval counter	<ul style="list-style-type: none"> Derived from axis 1 (only 1 V_{PP}) Interpolation factor can be set from 1-fold to 100-fold Can be used as trigger source or additional counting axis 		
Measured-value memory	Typically 250,000 position values per channel		
Measured-value trigger²⁾	Storage of the measured values of the four axes alternatively through external or internal trigger. External: <ul style="list-style-type: none"> Signal via trigger input Software command (over Ethernet) Internal: <ul style="list-style-type: none"> Timer Interval counter Reference pulse of the respective axis (from axis 1 also possible for other axes) 		
Trigger input ³⁾	D-sub connection, 9-pin, male; differential inputs as per RS-485 (terminating resistors can be activated)		
Trigger output ³⁾	D-sub connection, 9-pin, female, 4 differential inputs as per RS-485		
Access to measured values	Depends on the selected operating mode (see separate table)		
Software	<ul style="list-style-type: none"> Driver software for Windows, Linux and LabVIEW Program examples EIB application software 		
Data interface	Ethernet as per IEEE 802.3 (max. 1 Gbit) (data cable must be suitable)		
Network address	Automatic assignment through Dynamic Host Configuration Protocol (DHCP) or manual assignment		
Operating temperature	0 °C to 45 °C; (storage temperature -20 °C to 70 °C)		
Voltage supply	EIB 741: AC 100 V to 240 V (± 10 %), 50 Hz to 60 Hz (± 2 Hz), power consumption ≈ 30 W EIB 742: DC 24 V (-15 %/+20 %), ≤ 2 A		

¹⁾ The supply voltage range of the encoder must be maintained; specified cable length applies when HEIDENHAIN cables are used.

²⁾ Different trigger sources can be assigned to the individual axes.

³⁾ Can also be used as logical input or output.

IK 220

–The evaluation electronics as PC solution

The IK 220 evaluation unit is a PC counter card for two axes. It is inserted directly into a free PCI slot in the computer. The IK 220 is ideal for applications in which the measured-values are to be evaluated directly in the PC.

Design

Two HEIDENHAIN encoders with sinusoidal current signal ($\sim 11 \mu\text{App}$), sinusoidal voltage signal ($\sim 1 \text{ Vpp}$), EnDat 2.1 or SSI interface can be connected to the IK 220. External latch inputs/outputs and the output of ($\sim 11 \mu\text{App}$) measured value signals can be realized by using additional slot covers (accessory).


Functions

The IK 220 subdivides the periods of sinusoidal encoder signals up to 4096-fold for measured-value generation. They are called and stored either by using external latch inputs or by software.

The IK 220 features an integrated **measured value memory**. A total of up to 8192 measured values can be stored in the buffer and downloaded in a single block.

The **measured values are further processed** in the PC by programs created by the operator. To demonstrate the PC counter card's capabilities, examples of such programs and driver software for Windows 2000/XP/Vista/7 (32/64 bit) are supplied with the card.

Basic Circuit Diagram

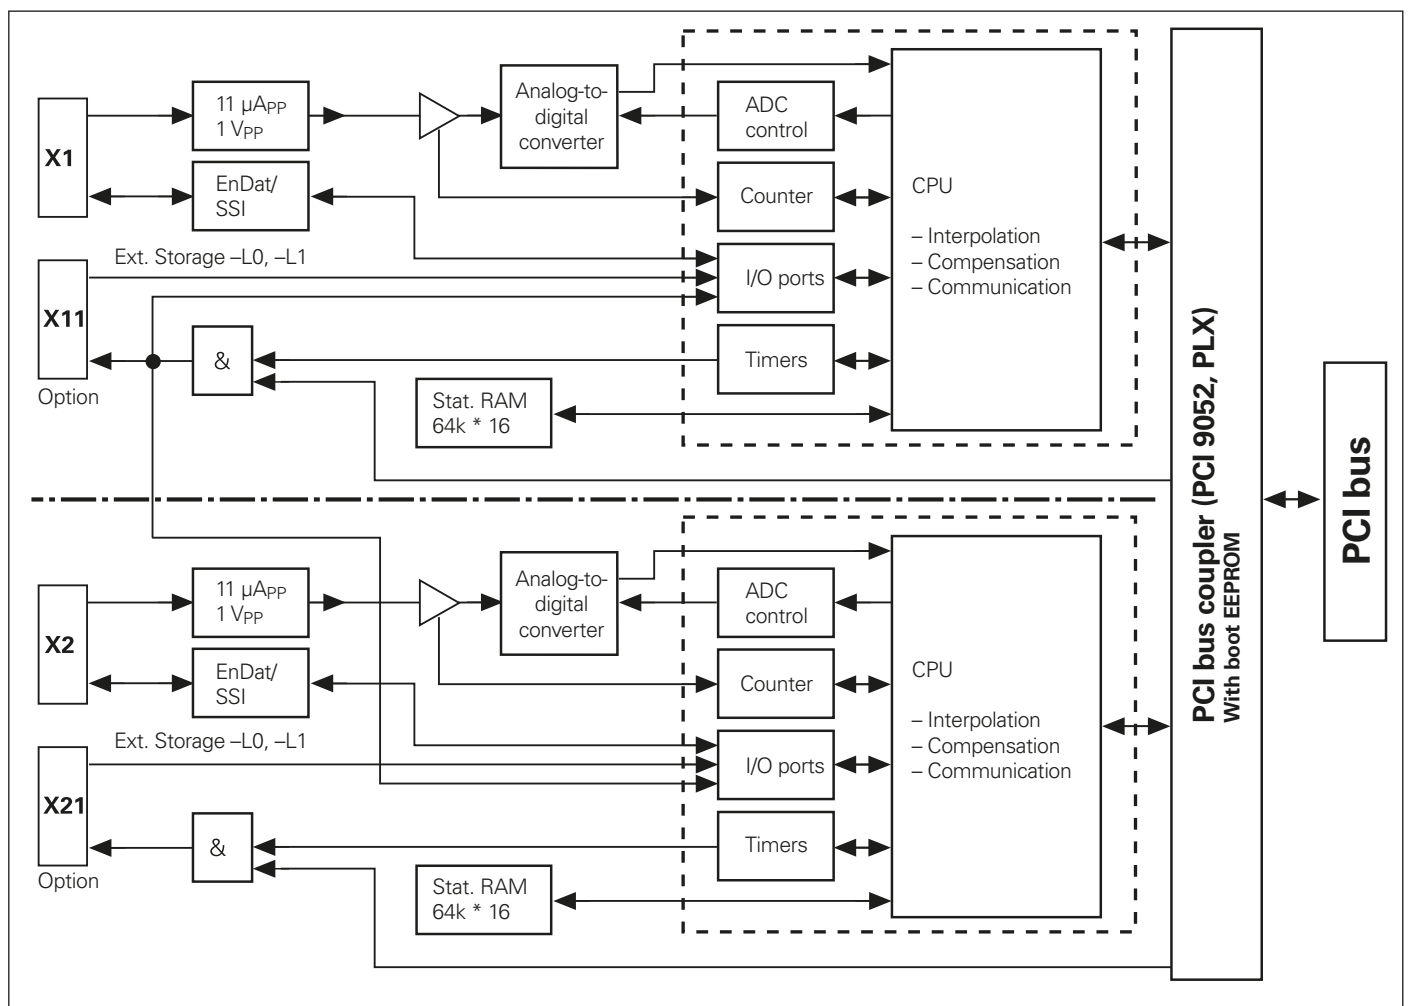



	IK 220			
Encoder inputs	D-sub connections, 15-pin, male (X1 and X2), for two encoders			
Input signals (switchable)	$\sim 1\text{ V}_{\text{PP}}$	$\sim 11\text{ }\mu\text{A}_{\text{PP}}$	EnDat 2.1	SSI
Input frequency	$\leq 500\text{ kHz}$	$\leq 33\text{ kHz}$	–	
Cable length ¹⁾	$\leq 60\text{ m}$		$\leq 10\text{ m}$	
Adjustment of encoder signals	Offset, phase and amplitude are adjusted through software			
Signal subdivision	4096-fold			
Data register for measured values	48 bits; only 44 bits are used for the measured value			
Internal memory	For 8192 position values			
Measured-value trigger	Alternatively through <ul style="list-style-type: none">• External latch signals (over separate IK assembly for external inputs/outputs)• Software command• Timer• Traversing the reference marks			
Access time to measured values	<ul style="list-style-type: none">• Without adjustment, without compensation run: $\leq 100\text{ }\mu\text{s}$• With adjustment, without compensation run: $\leq 110\text{ }\mu\text{s}$• With adjustment, with compensation run: $\leq 160\text{ }\mu\text{s}$		Depends on encoder	
Interface	PCI bus (plug and play) Local Bus Specification Rev. 2.1			
Driver software and demonstration program	For Windows 2000/XP/Vista/7 (32- and 64-bit) in VISUAL C++, VISUAL BASIC and BORLAND DELPHI			
Encoder outputs	$\sim 11\text{ }\mu\text{A}_{\text{PP}}$ Over PCB connector on the IK (10-pin, female) Fitting cable assembly with PC-slot cover available as option			
Power consumption	$\approx 4\text{ W}$, without encoders			
Dimensions	190 mm x 100 mm			
Operating temperature	0 °C to 55 °C; (storage temperature –30 °C to 70 °C)			


¹⁾ With HEIDENHAIN cable; greater cable lengths upon request

Mounting

Mounting the ND 100

You can set up the ND 12x either on a mounting arm on the machine, with the aid of a mounting stand, or install it in a control panel. The parts required for fastening the display are included in delivery. They enable you to rotate and tilt the display. The mounting arm, mounting stand, and mounting frame are available as accessories:


ND 123

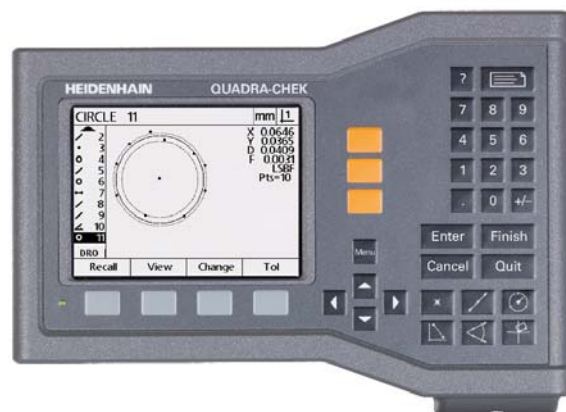

Accessories

Mounting arm, straight ID 382893-01




You can use the mounting arm to easily place the display at a conveniently operable position. It can be attached to the machine and swiveled by either a bracket or a hex bolt. The display is attached to the mounting arm via its own tilt/swivel mount.

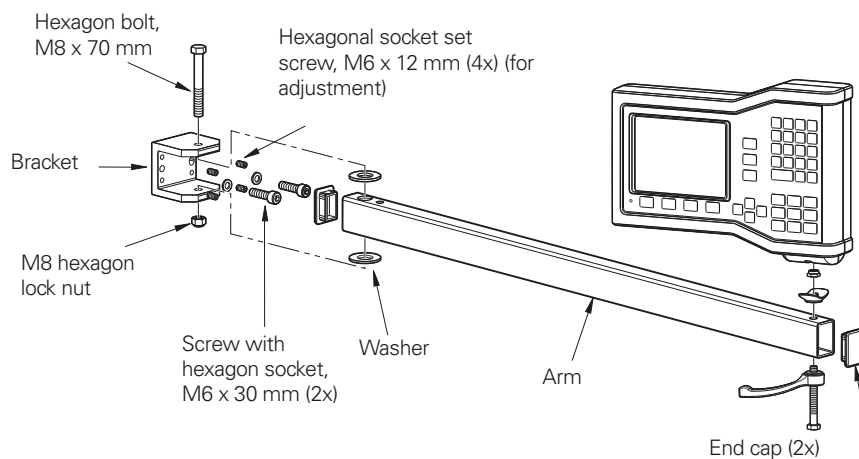


Mounting stand ID 625491-01

Mounting frame ID 647702-01

For mounting the ND 12x in a housing or operating panel.

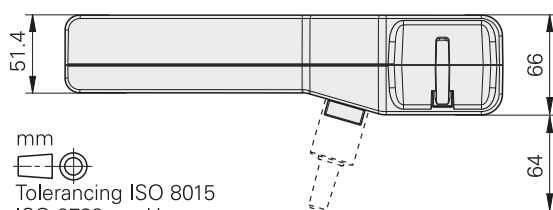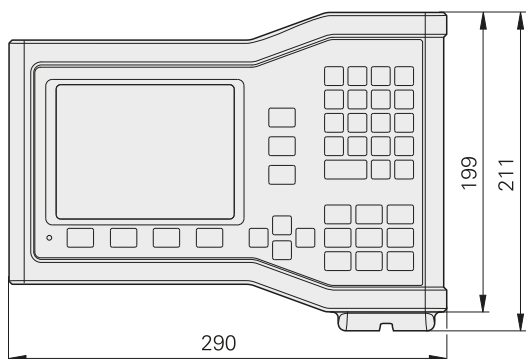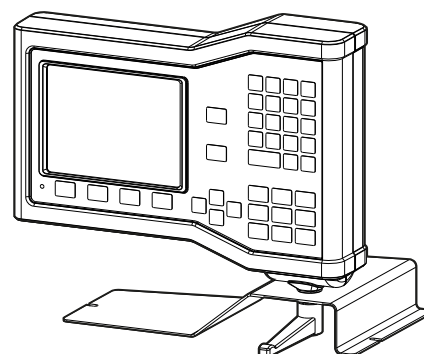

mm
Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

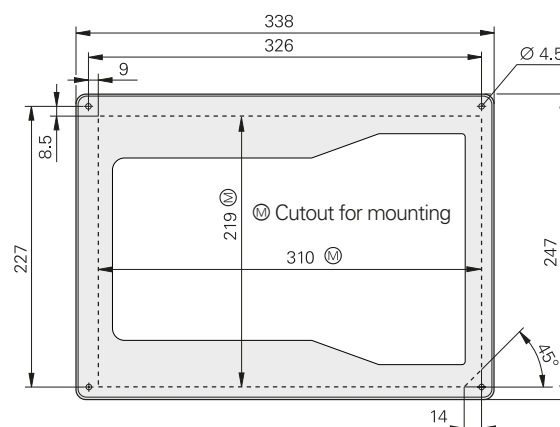

Mounting the ND 200

ND 200 series

The ND 200 series digital readouts were conceived as bench-top units. They can easily be stacked. Recesses on the top prevent the stacked units from moving out of place.



You can secure the ND 28x from below by using M4 screws on a base plate.

Two ND 28x readouts fit next to each other in a 19" housing. A mounting adapter is available as an accessory for mounting in a 19" housing.

Accessories

Mounting adapter for 19" housing
ID 654020-01

ND 287

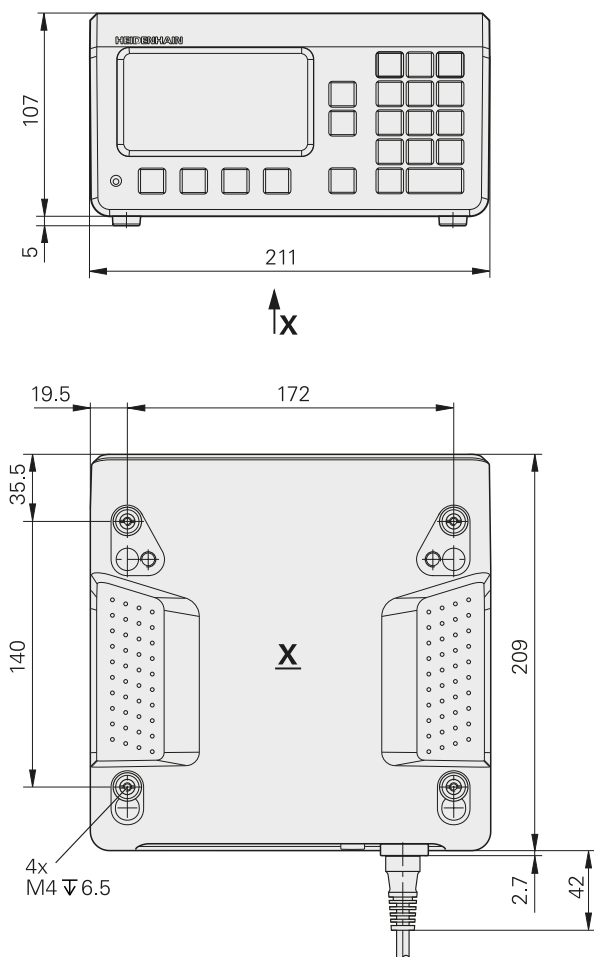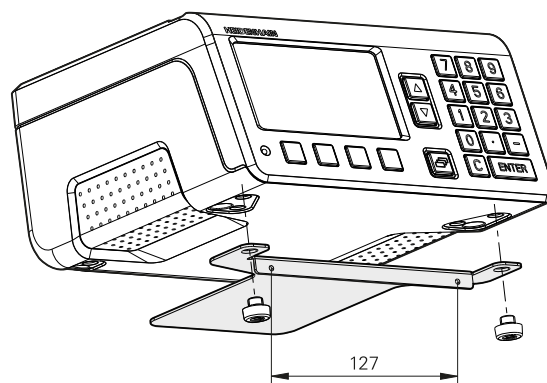

Mounting the ND 1000/ND 2000

The ND 1000 and ND 2000 are shipped with either a tilting base or a mounting base.




Tilting base


The readout can be used as a tabletop unit when placed on the tilting base. The readout can then be tilted forward or backward by up to 20° for the best reading angle. The tilting base can be attached with M5 screws.

ID 382892-02



ND 1300 with tilting base

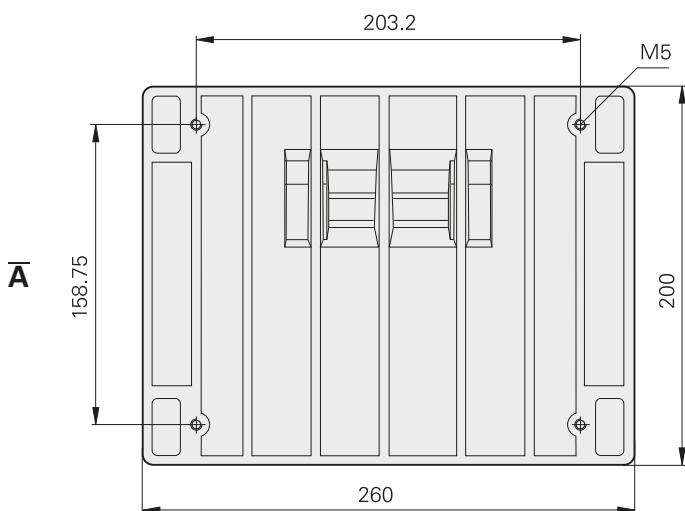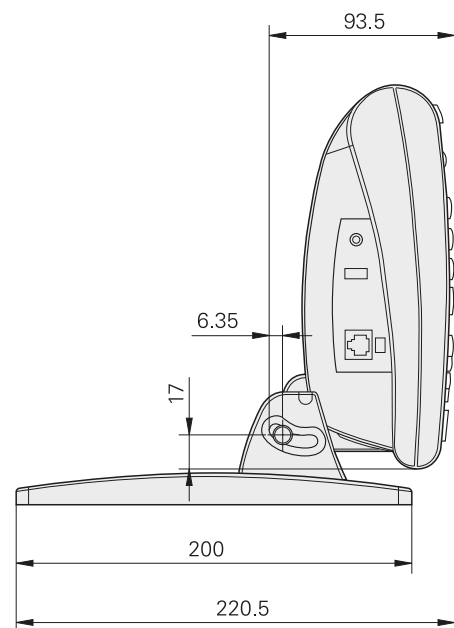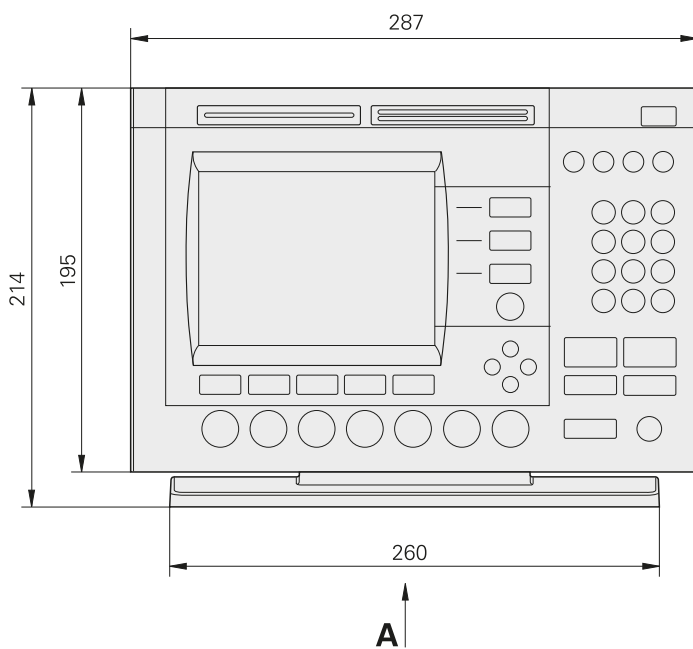

mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 < 6 mm: ±0.2 mm


Mounting adapter

The mounting adapter is used to attach the ND 1000 or ND 2000 to a mounting arm or directly to the machine. It also enables the user to tilt the readout.

ID 682419-01



Mounting adapter

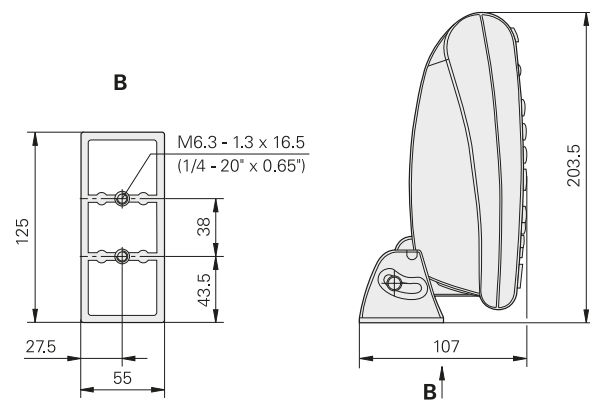

Accessories

Protective cover

Protective covers are available as accessories for protecting the keyboard and screen of the ND 1000/ND 2000 from becoming soiled. The display can still be easily read through the transparent protective covers. They fit themselves optimally to the front of the unit, without impairing the ease of operation.

ND 11xx (1/2 axes) ID 681051-02
ND 11xx (3/4 axes) ID 681051-03
ND 21xx

ND 12xx ID 681051-01



Mounting the QUADRA-CHEK 3000

The QUADRA-CHEK 3000 can be mounted flexibly with the Multi-Pos or Duo-Pos base at various tilting angles. The Multi-Pos holder or other fastening systems compatible with VESA MIS-D 100 are suited for fastening it to a machine.


Multi-Pos base

For mounting and fastening to a surface, continuously tiltable within an angle of 90°

ID 1089230-03






**QUADRA-CHEK 3000
with Multi-Pos base**

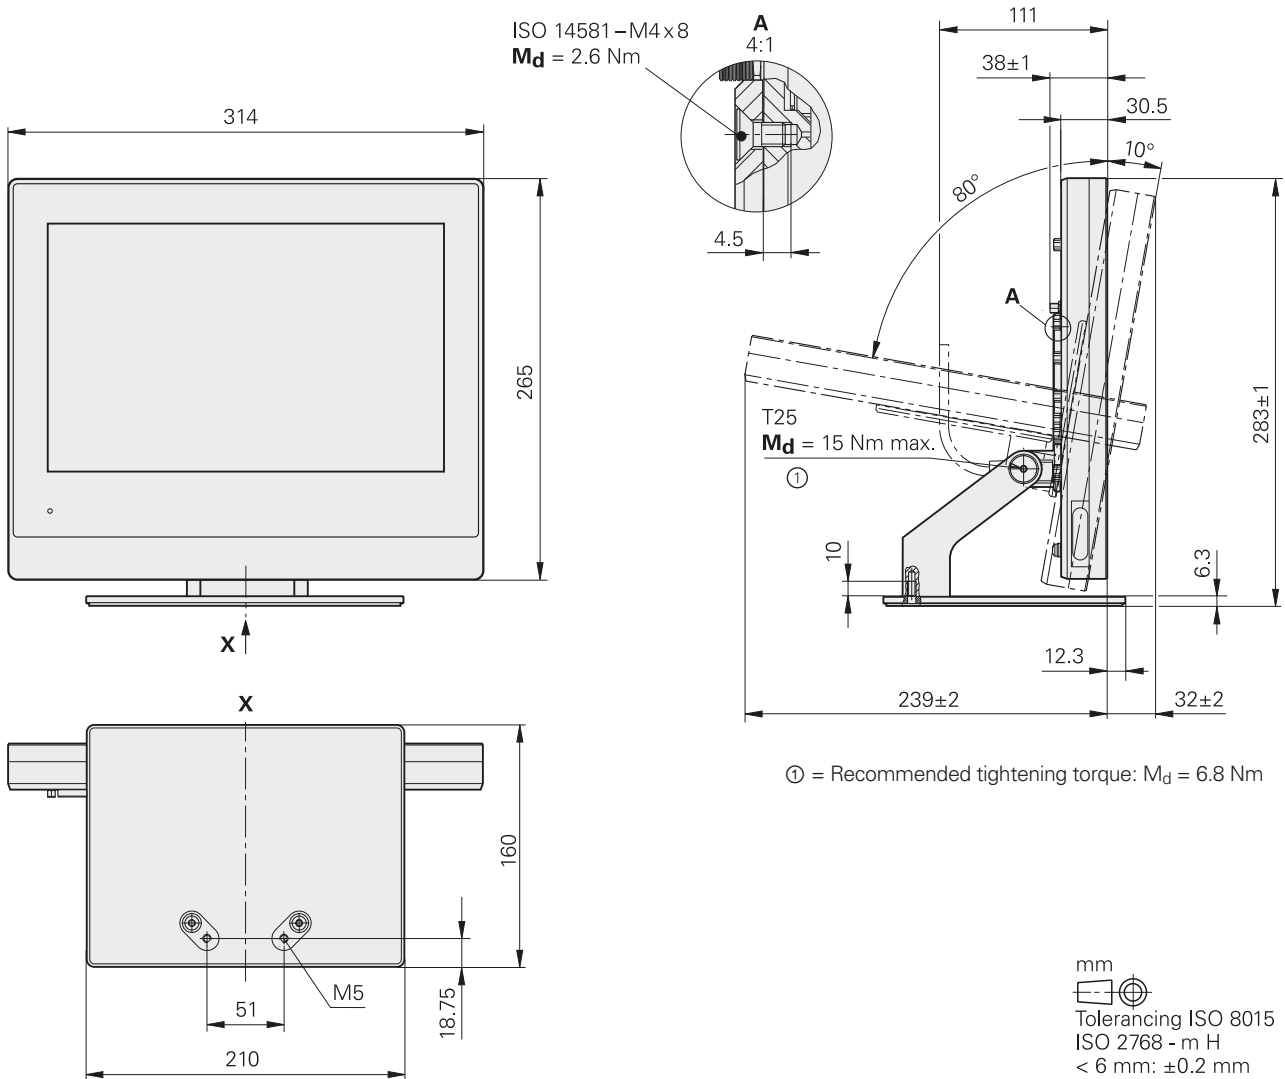

Duo-Pos base

For setup and fastening on a surface in two positions (20° or 45° tilt)


ID 1089230-02

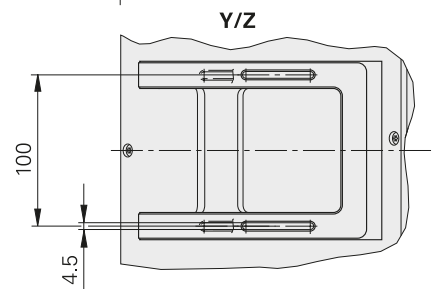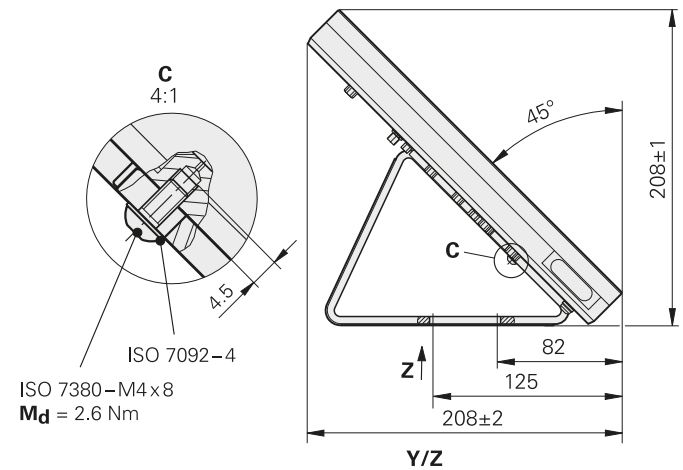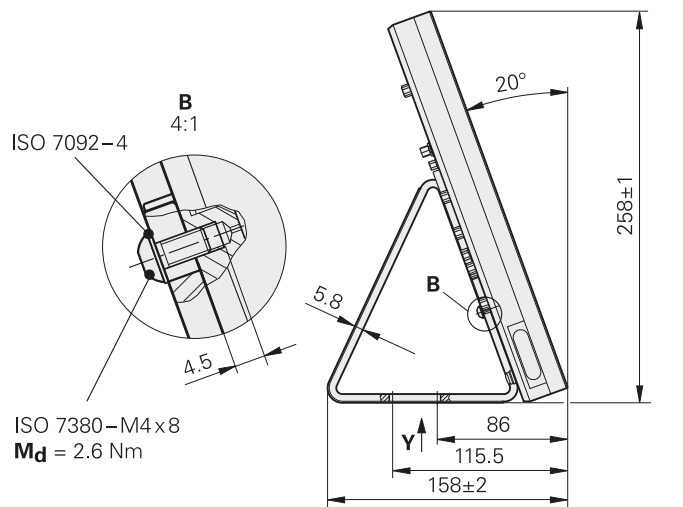

Multi-Pos holder

For fastening to an arm, continuously tiltable within an angle of 90°


ID 1089230-04

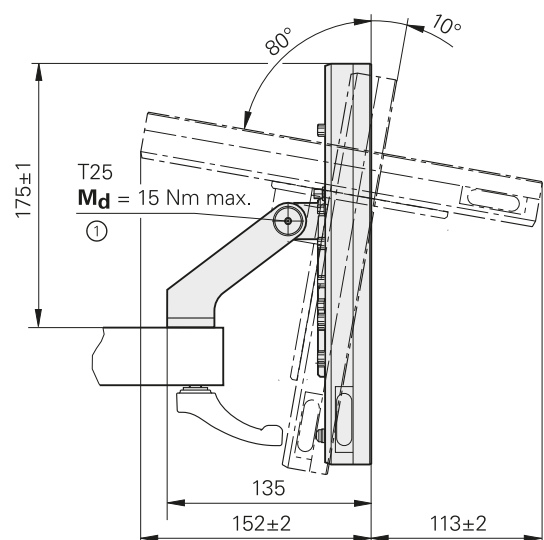

① = Recommended tightening torque: $M_d = 6.8$ Nm

Mounting the MSE 1000

The MSE 1000 modules are easily mounted on a standard rail in a cabinet or on a mounting stand (accessory). The individual modules are plugged onto each other and fixed together with a lock. This also connects the internal bus and the power supply. The module widths are selected so that the MSE 1000 is also suitable for a 19" housing.

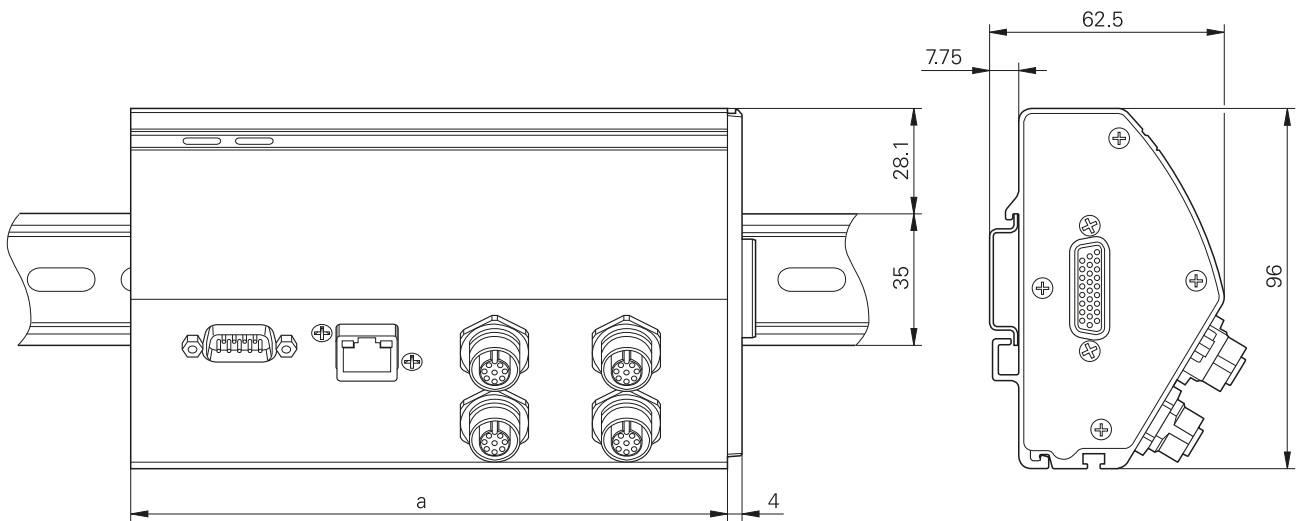

mm
Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm


	a
Size 1	53 mm
Size 2	106 mm
Size 3	159 mm

Accessories

Mounting stand

For mounting the MSE on a (table) surface. Two mounting brackets are connected together by two standard top hat rails. Two rows of modules or one MSE can be connected to it and a cable channel can be fastened.


ID 850752-01

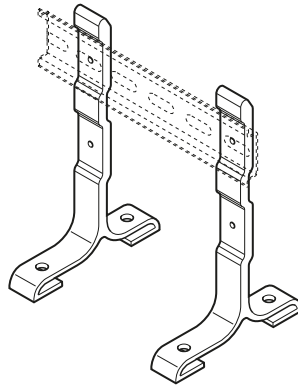

Connecting cables

For connecting two or more MSE rows, e.g. for mounting in an electrical cabinet.

ID 850753-xx

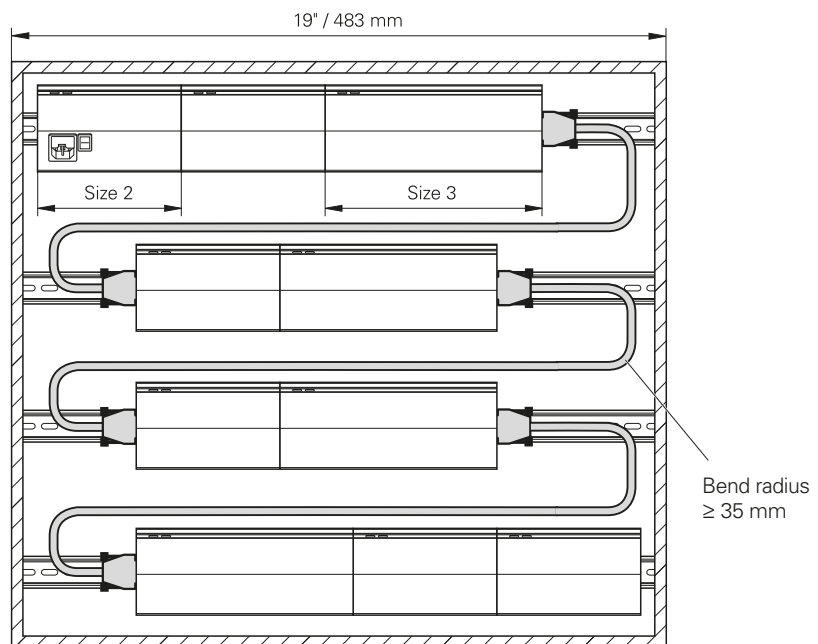

Mounting the EIB 700

The EIB 700s were conceived as bench-top units. They must be installed in a well ventilated area. The operating orientation is specified.

You can secure the EIB 700 from below by using M4 screws on a base plate. Two EIB 700 units fit next to each other in a 19" housing. They occupy one height unit. A mounting bracket is available as an accessory.






Accessories

Mounting bracket

For installation of two EIB 74x in a 19-inch housing

ID 671144-01

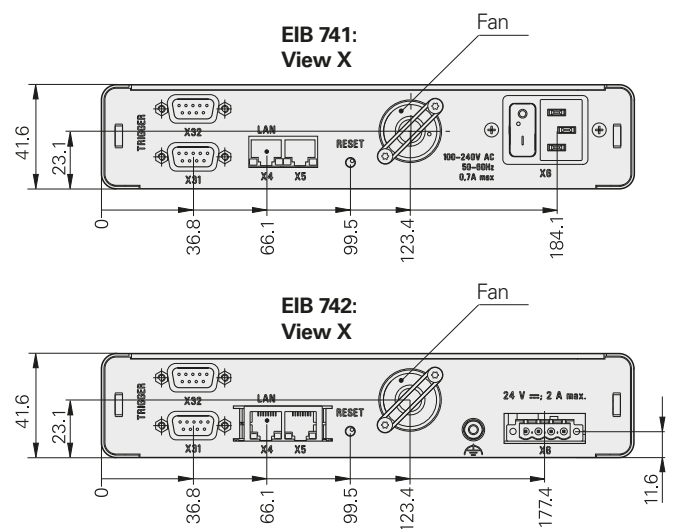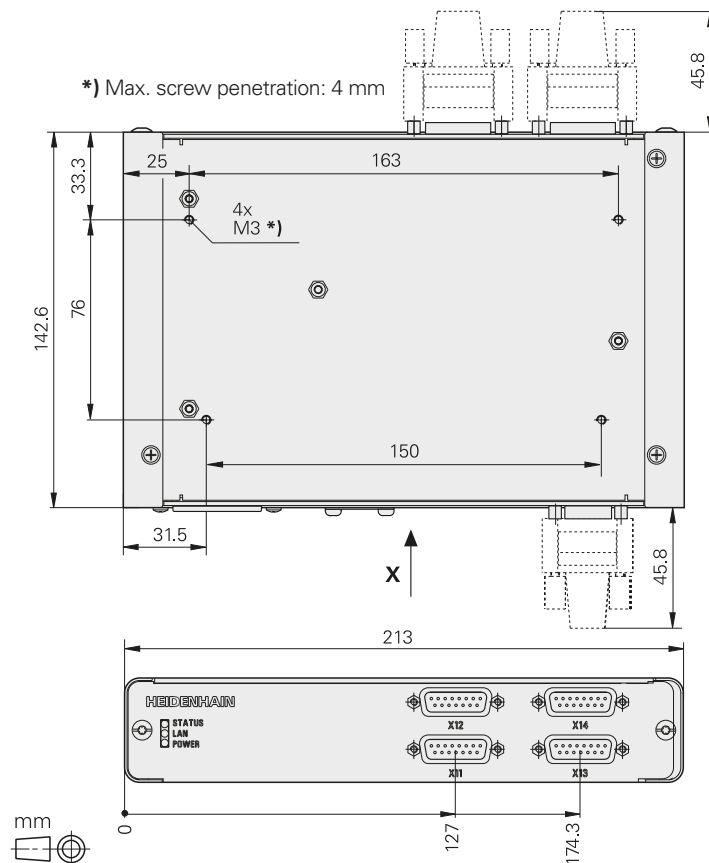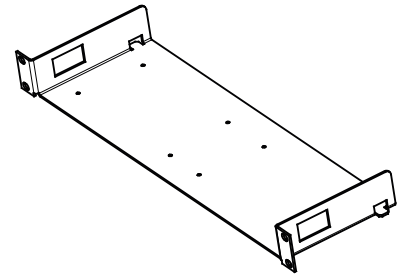

Accessories


Calibration and demonstration parts

HEIDENHAIN offers various calibration parts as accessories in order to calibrate the optical and tactile edge detection methods.

Calibration standard

For the calibration of video measuring machines, measuring microscopes and profile projectors. It can be traced back to national or international standards.

ID 681047-01

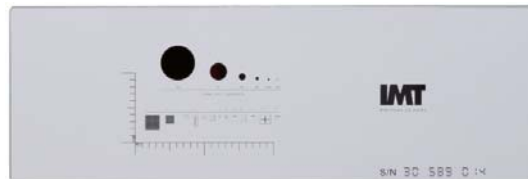

Calibration standard

2-D demo part

The 2-D demo part is included with the ND 1200, ND 1300, QUADRA-CHEK 3000 and IK 5000. The application examples in the User's Manuals are based on this part. It can be reordered if a replacement is necessary.

ID 681047-02



2-D demo part

3-D demo part (accessory)

Demo part for touch-probe applications. Examples in the ND 1400 and IK 5000 User's Manuals are based on this part.

ID 681048-01



3-D demo part

3-D demo part for multi-sensor scanning (accessory)

Demo part for combined touch-probe applications and video edge detection. It is used for the examples in the IK 5000 User's Manual.

ID 681048-02



3-D demo part for multi-sensor scanning

Adapter connector for QUADRA-CHEK 3000

For conversion of the pin layout from HEIDENHAIN TTL to RSF TTL and Renishaw TTL.

ID 1089210-01

Adapter connector for QUADRA-CHEK 3000

For conversion of the pin layout for light control (without zoom) from QUADRA-CHEK 3000 (X103) to assignment for ND 1300 QUADRA-CHEK (light)

ID 1089212-01



TTL adapter connector



Adapter connector for light control

External control elements

The evaluation electronics and the PC package can be operated easily and intuitively. However, remote operability may also be useful and convenient in some situations. The following components are available for remote operation:

Foot switch (accessory)

Cable length 2.4 m

For ND with RJ 45 connector
with two freely assignable keys
ID 681041-01

For IK 5000 with 3-pin DIN connector
with two freely assignable keys
ID 681041-02

For MSE 1000 with 9-pin D-sub connector
with two keys ID 681041-03



Foot switch

Keypad (accessory)

For remote operation of the evaluation unit; features a numeric keypad and "enter" and "finish" keys; cable length: 4.5 m; with RJ45 connector.

ID 681043-01



Keypad

Joystick (accessory)

For remote operation and sensitive traversing of axes for ND 1300 and IK 5000. With 15-pin D-sub connector.

Without trackball ID 681044-02

With trackball ID 681044-01

With trackball and
Z-focus fine adjustment ID 681044-05



Joystick without trackball



Joystick with trackball and Z-focus fine adjustment

Optical edge sensor and amplifier

Optical edge detector

Two fiber-optic cables are necessary for edge detection with the optical edge finder. One fiber-optic cable is attached to the projection screen with a transparent holder. The second cable is attached near the transmitted light source so that the fibers point toward the light source. The following accessory components are required.

Fiber-optic cable (accessory)

With one right-angle end and an SMA connector (subminiature A) for ND or IK.

Bend radius ≥ 25 mm

Temperature ≤ 100 °C

Lengths 2 m, 3 m, 5 m

ID 681049-xx

Holder (accessory)

With a hole for accepting the right-angle end of fiber-optic cables. Transparent design so that it can be attached to the projection screen.

Lengths: 350 mm, 600 mm, 760 mm

ID 681050-xx

Fiber-optic cable connector (accessory)

Two SMA (subminiature A) connectors for connecting an integrated edge detector.

Bend radius ≥ 25 mm


Temperature ≤ 100 °C

Lengths 2 m, 3 m, 5 m

ID 681049-xx



Fiber-optic cable

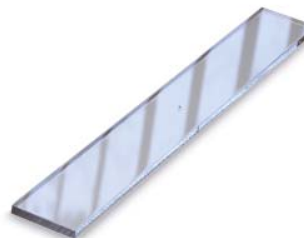

Holder



Fiber-optic cable connection

Interfaces

Evaluation electronics with integrated display

The evaluation electronics feature interfaces for encoders, for communication and for external components.



	ND 122 ND 123	ND 1102 ND 1103 ND 1104	ND 1202 ND 1203 ND 1204	ND 1302 ND 1303 ND 1304		ND 1404	ND 2104G ND 2108G	ND 287	QC 3014 NC QC 3024 NC
Encoders									
1 V _{PP} /11 μA _{PP}	–/–	●/–	●/–	●/–	●/–	●/–	●/–	●/●	●
TTL	●	●	●	●	●	●	●	–	●
EnDat 2.2. ¹⁾	–	–	–	–	–	–	●	●	–
Touch probes	–	● ²⁾	–		–	● ²⁾	–	–	–
Video	–	–	–	● ³⁾	–	–	–	–	SW option ⁵⁾
Fiber-optic cable	–	–	Option ⁴⁾	–	●	–	–	–	–
Sensor ±10 V	–	–	–	–	–	–	–	Option	–
Data									
USB	Type B	Type A	Type A	Type A	Type A	Type A	Type A	Type B	Type A
RS-232-C/V.24	–	●	●	●	●	●	●	●	–
Ethernet	–	–	–	–	–	–	–	Option	●
Light control	–	–	–	Option	–	–	–	–	SW option
Zoom	–	–	–	Option	–	–	–	–	–
CNC outputs	–	–	–	Option	Option	–	–	–	–
Foot switch	–	●	●	●	●	●	●	–	–
Operating panel	–	●	●	–	–	–	●	–	–
Switching outputs	–	–	–	–	–	–	12 TTL	6 TTL	–
Switching inputs	–	–	–	–	–	–	5 TTL	12 TTL	–

● = Available

– = Not available

1) Purely serial, no evaluation of incremental signals

2) HEIDENHAIN or Renishaw touch probe

3) S-Video and composite

4) With ND 1204 upon request

5) Cameras of the IDS Imaging Developing Systems GmbH with max. 2-megapixel resolution

Optional assemblies with ND 287

Various input and output assemblies are available for the evaluation electronics

Second encoder input (option)

The ND 287 evaluation unit can be equipped with an optional second encoder input.

Encoder module

Input assembly for second encoder with 1 V_{PP} 11 μA_{PP} or EnDat 2.2. interface ID 654017-01


Analog input (option)

The ND 287 digital readout can be equipped through an optional input assembly with an additional analog input for connecting a sensor. The input voltage range is interpolated 4096-fold; for a sensor with ±10 V the resolution is therefore 5 mV. The analog module provides 5 V DC, 12 V DC and 24 V DC as power supply for the sensor.

The 5 V DC (B) and 12/24 V DC (A) are galvanically isolated. They must not be used at the same time. A 9-pin D-sub connector is required as mating connector.

Analog module

Input assembly for ±10 V analog sensor ID 654018-01

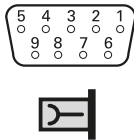

Pin	Assignment
1	–12 V (A)/85 mA
2	0 V (A)
3	0 V (A)
4	+12 V (A)/85 mA
5	Shield
6	0 V (B)
7	0 V (B)
8	Sensor (B) ±10 V max.
9	+5 V (B)/400 mA


Ethernet (option)

The ND 287 evaluation unit can be equipped with an optional Ethernet module.

Ethernet module

ID 654019-01

The module is provided with an Ethernet 100BaseT interface with RJ45 connector (female, 8-pin). This enables you to connect the ND 287 directly to your company's intranet or, with a crossover cable, to a PC.



Pin	Assignment
1	TX+
2	TX–
3	REC+
4	Do not assign
5	Do not assign
6	REC–
7	Do not assign
8	Do not assign
Housing	External shield

IK 5000 evaluation unit



Connections to the IK 5000 are made via its D-sub connectors. Depending on the version, further connections are made through one, two or three additional slot covers. Please order the adapter cables necessary between the individual components separately.

		IK 5293	IK 5294	IK 5394		IK 5493	IK 5494	
	Slots ¹⁾	2	2	3	4	3	4	4
	Position							
Encoders for X, Y, Z	IK	1 V _{PP} or TTL						
CNC outputs	IK	–	–	–	–	●	●	●
Foot switch	IK	●	●	●	●	●	●	●
Fiber-optic cable	Slot L	–	–	● ²⁾	–	● ²⁾	–	–
Touch probe³⁾	Slot 1	●	–	–	●	–	–	●
Light control	Slot 1	–	–	–	●	–	●	●
Encoder for Q	Slot 2	–	1 V _{PP} or TTL					
Zoom	Slot 3	–	–	–	●	–	●	●
Video	PC	–	–	–	USB camera ⁴⁾	–	USB camera ⁴⁾	USB camera ⁴⁾

● = Available; – = Not available

¹⁾ Including IK; ²⁾ Connected directly to the IK PCB, special slot cover with cable guide included in delivery

³⁾ HEIDENHAIN or Renishaw touch probe; ⁴⁾ Connected to the USB port of the PC

Adapter cable		1 V _{PP}	TTL
Complete with D-sub connector (female), 15-pin (1 V _{PP}) or 9-pin (TTL), and 3-pin mini-DIN connector (female) For connecting the XYZ encoders and the foot switch to the IK 5000			
	For 3 axes XYZ and foot switch	540550-40	540550-10
	For 2 axes XY and foot switch	540540-24	540540-05
Complete with D-sub connector (female), 15-pin (1 V _{PP}) or 9-pin (TTL) For connecting the Q encoder to the IK 5000		540541-24	540541-05

MSE 1000 evaluation electronics

The modules of the MSE 1000 evaluation unit feature D-sub connectors or M12 plug connectors for connecting encoders and for external operation.

	MSE 1114	MSE 1124	MSE 1184	MSE 131x	MSE 132x	MSE 1332	MSE 1358	MSE 138x
Encoders							–	
1 V _{PP}	–	–	4	–	–	–	–	4 or 8
TTL	–	4	–	–	4 or 8	–	–	–
EnDat 2.2	4	–	–	4 or 8	–	–	–	–
Analog ±10 V	–	–	–	–	–	2 ¹⁾	–	–
Analog 4 mA to 20 mA	–	–	–	–	–	2 ¹⁾	–	–
LVDT or HBT ²⁾	–	–	–	–	–	–	8	–
Foot switch	●	●	●	–	–	–	–	–

¹⁾ Selectable

²⁾ Please note when ordering

	MSE 1401	MSE 1501
Switching input	4 TTL	–
Switching output	4 relays	–
Compressed air	–	●

EIB 700, EIB 220 evaluation units

The EIB 700 and IK 220 evaluation units feature D-sub connectors for connecting encoders and for external operation.

With the IK 220, the encoder signals can be conducted out over an additional slot cover. They are available as 11 μ A current signals for further processing in evaluation electronics or EXE pulse-shaping electronics. A further slot cover contains the connections for the external inputs/outputs, e.g. for storing the measured values.

	EIB 700	IK 220
Encoder inputs		
1 V _{PP}	4 ¹⁾	2 ¹⁾
11 μ A _{PP}	4 ¹⁾ Upon request	2 ¹⁾
EnDat 2.1	4 ¹⁾	2 ¹⁾
EnDat 2.2	4 ¹⁾	–
SSI	–	2 ¹⁾
Encoder outputs		
11 μ A _{PP}	–	2 (optional assembly)
Trigger input	4	2 (optional assembly)
Trigger output	4	2 (optional assembly)
PLC inputs/outputs	4/4 ²⁾	2/–

¹⁾ Selectable

²⁾ Can also be used as a trigger or logical input or output

Accessories

External inputs/outputs for IK 220


Slot cover with two D-sub connections (9-pin) male

ID 340253-01

Output assembly for IK 220

Slot cover with two D-sub connections (9-pin), male, for leading the encoder signals (11 μ A_{PP}) to the subsequent electronics.





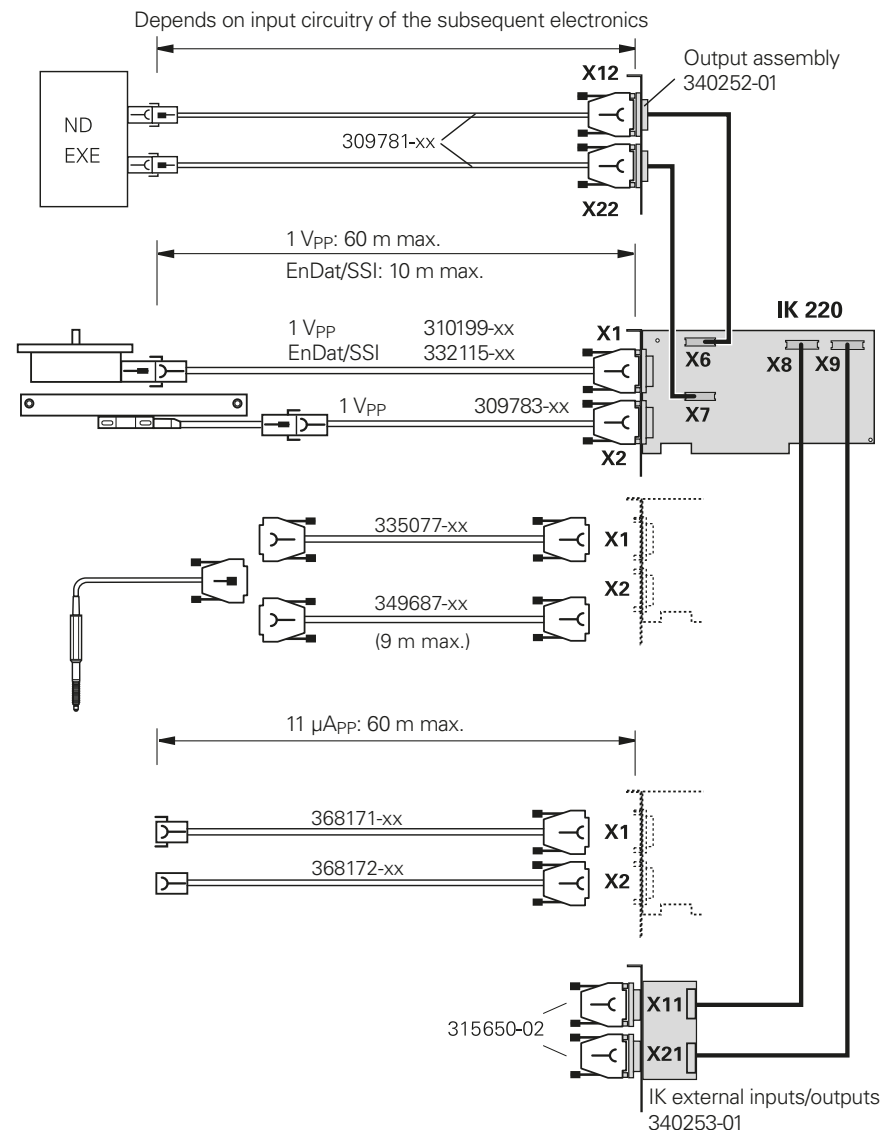ID 340252-01



Encoders




Evaluation units feature interfaces for connecting HEIDENHAIN encoders. Other interfaces are available upon request. A distribution cable is necessary in order to attach the encoders to the IK 5000.

Pin layout ~ 1 V_{PP}

15-pin D-sub flange socket (female)												
												
	Power supply				Incremental signals						Others	
	4	12	2	10	1	9	3	11	14	7	5/6/8/ 13/15	
~ 1V _{PP}	U _P	Sensor U _P	0V	Sensor 0V	A+	A-	B+	B-	R+	R-	/	
												





Cable shield connected to housing; **U_P** = Power supply voltage
Sensor: The sensor line is connected in the encoder with the corresponding power line.
Vacant pins or wires must not be used.

Pin layout □ □ TTL

9-pin D-sub flange socket (female)									
									
	Power supply voltage		Incremental signals						Others
	7	6	2	3	4	5	9	8	1
□ □ TTL	U _P	0 V	U _{a1}	U _{a1}	U _{a2}	U _{a2}	U _{a0}	U _{a0}	/






Cable shield connected to housing; **U_P** = Power supply voltage
Vacant pins or wires must not be used.

Pin layout of ND 2100 G and MSE 1000 EnDat






8-pin flange socket, M12								
								
	Power supply voltage				Serial data transfer			
	8	2	5	1	3	4	7	6
	U _P	Sensor U _P	0 V	Sensor 0 V	DATA	DATA	CLOCK	CLOCK
								

Cable shield connected to housing; **U_P** = power supply voltage
Sensor: The sensor line is connected in the encoder with the corresponding power line.
Vacant pins or wires must not be used.

Pin layout of series ND 200 $\sim 1 V_{PP}/\sim 11 \mu A_{PP}/EnDat$




15-pin D-sub flange socket (female)																	
																	
	Power supply voltage				6	Incremental signals						Serial data transfer					
	4	12	2	10		1	9	3	11	14	7	5	13	8	15		
	~ 1V _{PP}	U _P	Sensor U _P	0V		Sensor 0V	/	A+	A–	B+	B–	R+	R–	/	/	/	/
	~ 11 μA _{PP}					Internal shield	I ₁₊	I _{1–}	I ₂₊	I _{2–}	I ₀₊	I _{0–}	/	/	/	/	
	EnDat						/	/	/	/	/	/	DATA	DATA	CLOCK	CLOCK	

Pin layout of IK 220

15-pin D-sub flange socket (male)																
<div></div>																
	Power supply					Incremental signals						Serial data transfer				
	1	9	2	11	13	3	4	6	7	10	12	5	8	14	15	
11 μ A _{PP}	U _P 5 V	Sensor 5 V	U _N 0 V	Sensor 0 V	Internal shield	I ₁ +	I ₁ –	I ₂ +	I ₂ –	I ₀ +	I ₀ –	/	/	/	/	
1 V _{PP}						A+	A–	B+	B–	R+	R–	/	/	/	/	
EnDat SSI						A+	A–	B+	B–	/	/	DATA	<u>DATA</u>	CLOCK	<u>CLOCK</u>	

Shield on connector housing
Vacant pins or wires must not be used.

Pin layout of MSE 1000, analog

Mating connector: 9-pin D-sub flange socket (female)										
 										
	Power supply 1			Power supply 2		Shield		Analog signal		
	1	4	3	9	6	5	Housing	8	2	7
	– 12 V	+ 12 V	0 V	5 V	0 V	Shield	Chassis ground	U _A	I _A	I _A

U_A: Analog voltage signal – 10 V to + 10 V; I_A: Analog current signal 4 mA to 20 mA

Cable shield connected to housing; U_P = power supply voltage
Sensor: The sensor line is connected in the encoder with the corresponding power line.
Vacant pins or wires must not be used.

Switching inputs/outputs on ND 287

Switching inputs

The ND 287 evaluation unit features many inputs for external operation and outputs for switching functions.

The input can respond by pulse or make contact.

Exception: The switching inputs for transmitting measured values over the data interface are separate for contact and pulse.

The switching input E is active when a Low signal U_L is applied (contact or pulse to 0 V).

Signal level

- $0.5\text{ V} \leq U_L \leq 0.9\text{ V}$ with $I_L \leq 6\text{ mA}$
- $3.9\text{ V} \leq U_H \leq 15.0\text{ V}$
- $t_{\min} \geq 30\text{ ms}$

Zero reset/preset

Each axis can be set by an external signal to the display value zero or to a value stored in a parameter (SET).

External control of measurement series Switching the display between MIN, MAX or DIFF

With a continuously applied Low signal at the corresponding switching input you activate the external control of measurement series. Starting a measurement series and switching to the MIN/MAX/DIFF display are controlled externally over additional switching inputs.

Ignoring reference mark signals

(reference pulse lock)
When the input is active, the readout ignores all reference mark signals. A typical application is for linear measurement through the lead screw and a rotary encoder.

Activating or deactivating REF mode


After switch-on or a power interruption, the digital readout can be switched externally to REF mode. The next signal then deactivates REF mode (switchover function).

Display with axis coupling

As an option, the ND 287 can have two encoder inputs. Using switching inputs, you can switch the display to individual measured values, sum, difference or any logical operation.

	ND 287
12 switching inputs	Reset, clear error message Set datum Ext. control of measurement series or display of $X1^{1)}$ Start measurement series or display of $f(X1, X2)^{1)}$ Display minimum MIN or display of $X2^{1)}$ Display maximum MAX or display of $X1 + X2^{1)}$ Display difference DIFF or display of $X1 - X2^{1)}$ Measured value output (pulse) Measured value output (contact) Ignore reference mark signals (input X1) Ignore reference mark signals (input X2) Activating or deactivating REF mode
6 switching outputs	Display value is zero Measured value switching limit A1 Measured value \leq switching limit A2 Measured value $>$ upper sorting limit Measured value $<$ lower sorting limit Error

¹⁾ Also selectable by parameter

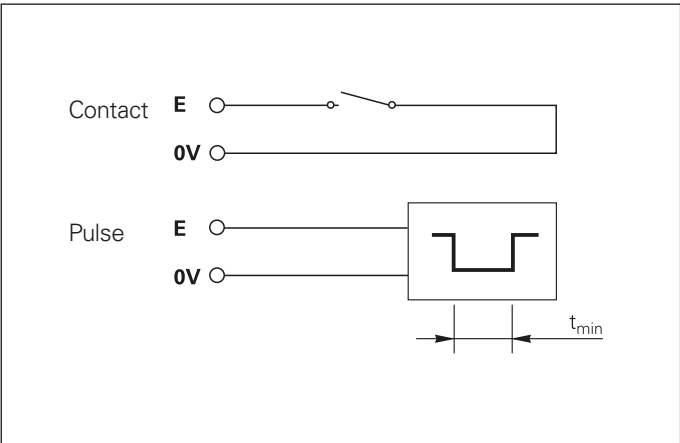

Switching outputs

The ND 287 features open-collector outputs that switch to 0 V (= active Low).

Delay of signal output:

$t_v \leq 20 \text{ ms}$

Signal level

$U_L \leq 0.4 \text{ V}$ with $I_L \leq 100 \text{ mA}$
 $U_H \leq 32 \text{ V}$ with $I_H \leq 10 \mu\text{A}$

Trigger points (in actual value mode)

When the measured value reaches trigger points defined by parameter, the corresponding output becomes active. Up to two trigger points can be defined.

Switch-off ranges (distance-to-go mode)

In the distance-to-go mode the trigger points function as switch-off ranges. They are located symmetrically around the display value 0.

Sorting limits






When the measured value exceeds the limits defined via parameters, the corresponding outputs become active.

Trigger signal for error

The ND 200 series readouts constantly monitor the measuring signals, the input frequency, the data output, etc. for errors, and report errors as they occur with error messages. If errors occur that may distort the measurement or corrupt the data, the readout activates a switching output. This feature allows the monitoring of automated processes.

Zero crossover

At the display value "zero," the corresponding output becomes active. The minimum signal duration is 180 ms.

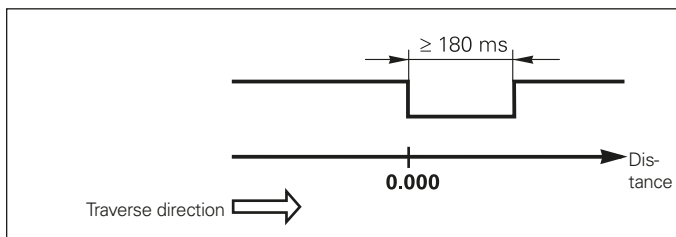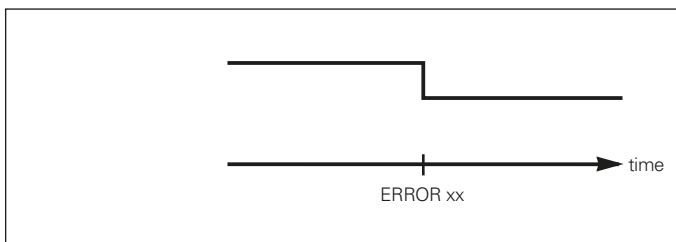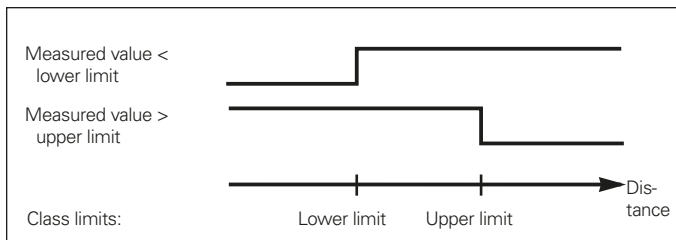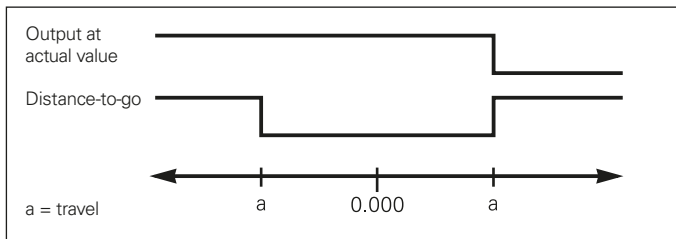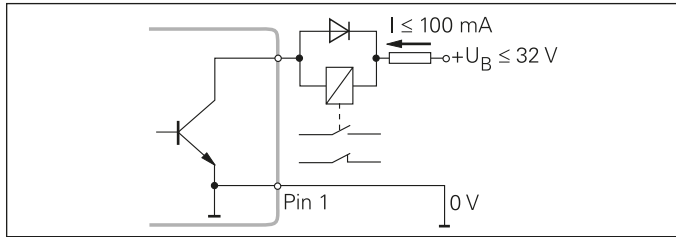


MSE 1000 inputs/outputs

Relay outputs

Specifications

$U_L \leq \text{DC/AC } 30 \text{ V}$
 $I_L \leq 0.05 \text{ A}$
 $t_D \leq 25 \text{ ms}$

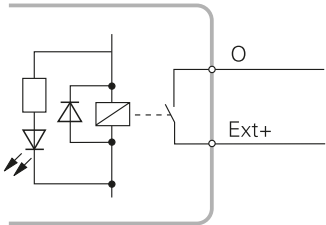


Switching inputs

The switching inputs are active when a High signal (contact or pulse) is present. They are isolated and can be supplied externally or internally.

Specifications


$0 \text{ V} \leq U_L \leq 1.5 \text{ V}$
 $4.5 \text{ V} \leq U_H \leq 26 \text{ V}$
 $I_L \leq 25 \text{ mA}$
 $t_{\min} \geq 100 \text{ ms}$

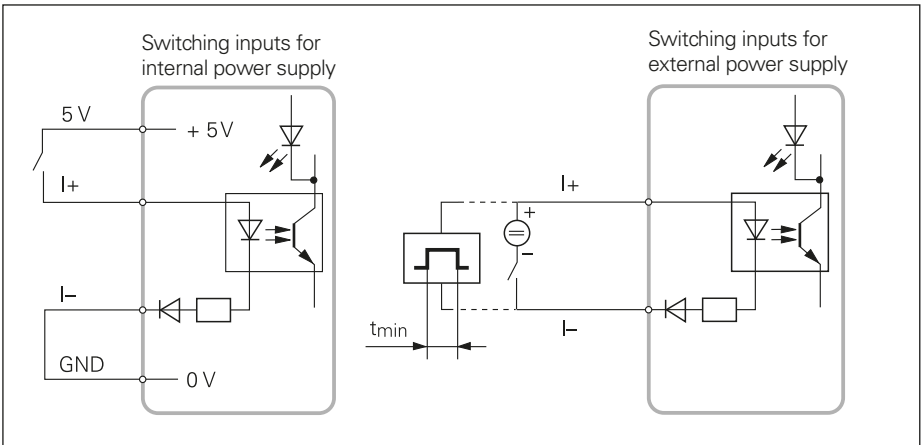

Relay outputs and switching inputs are integrated in the MSE 1401 input/output module. It is available in two versions.


- IP 40 protection** Electrical connections as terminals
IP 65 protection Electrical connections as individual M8 connecting elements

IP 40 terminal block

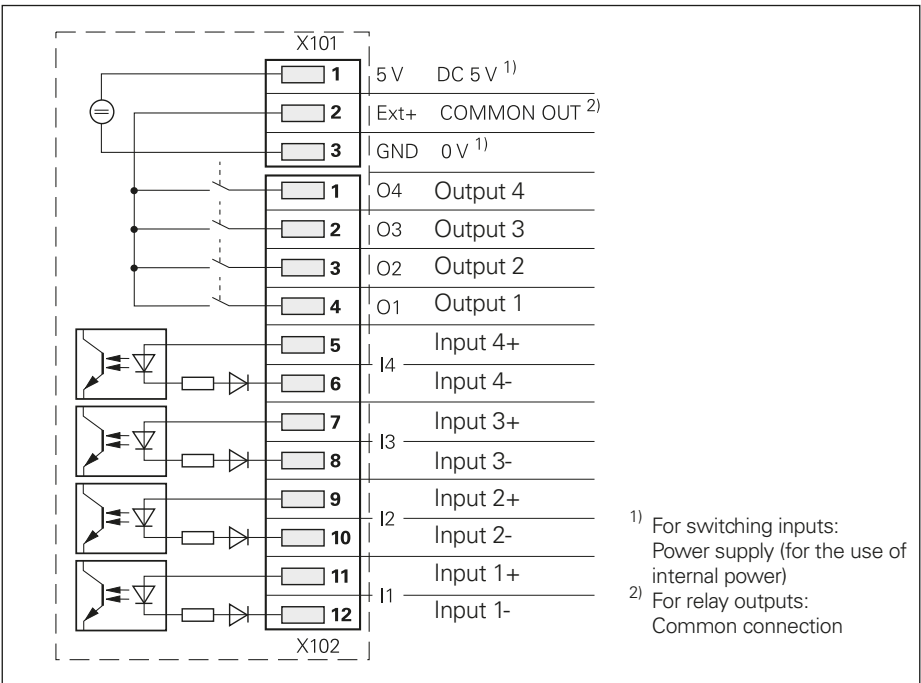

IP 65 relay outputs

Mating connector for MSE 1401 (IP65)
M8 coupling (male) 3-pin
ID 1071953-01



PIN Assignment		
1	O	Output
3	Vacant	
4	Vacant	

IP 65 relay inputs


Mating connector for MSE 1401 (IP65)
M8 coupling (male) 3-pin
ID 1071953-01



PIN Assignment		
1	I+	Entrance
4	I-	
3	Vacant	

IP 65 power supply

Mating connector for MSE 1202 and MSE 1401 (IP65)
M8 connector (female), 3-pin
ID 1071955-01




PIN Assignment		
1	DC 5 V	For switching inputs: Power supply (for the use of internal power)
4	0 V	
3	COMMON OUT	For relay outputs: Common connection

Supply unit

The MSE 1202 power-supply module with 24 V DC has an M8 connection

Mating connector
M8 connector (female), 3-pin



PIN Assignment		
1	24 V DC	Power supply voltage
3	0 V	
4	Vacant	

Software

QUADRA-CHEK Wedge

QUADRA-CHEK Wedge software


For communication between the ND 280, 287/ND 1000/ND 2000 and PC ID 709141-01

The QUADRA-CHEK Wedge software simplifies communication between an ND 280, 287/ND 1000/ND 2000 and a Windows-based PC. The measured values are transmitted from the evaluation unit to the PC via a RS-232-C connection, and are written directly to an Excel table, where the data can be edited, saved and printed. A suitable RS-232-C cable* is included with QUADRA-CHEK Wedge (cable length: 3 m).


* Cable not suitable for ND 28x, cable for ND 28x can be ordered separately under ID 366964-03

System requirements

- Windows XP, Vista, 7, 8 or 10 (32-bit/64-bit)
- Internet Explorer 6.0 or higher
- Excel 2003 or later
- Windows user rights: Administrator

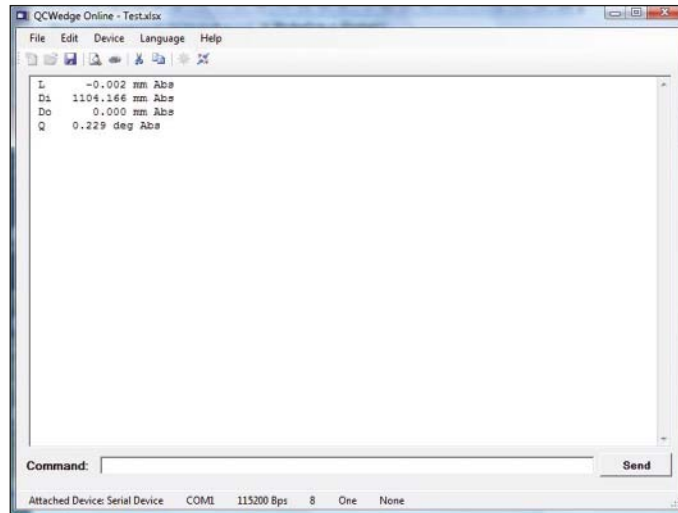

The values acquired by the evaluation electronics are transmitted to the PC ...

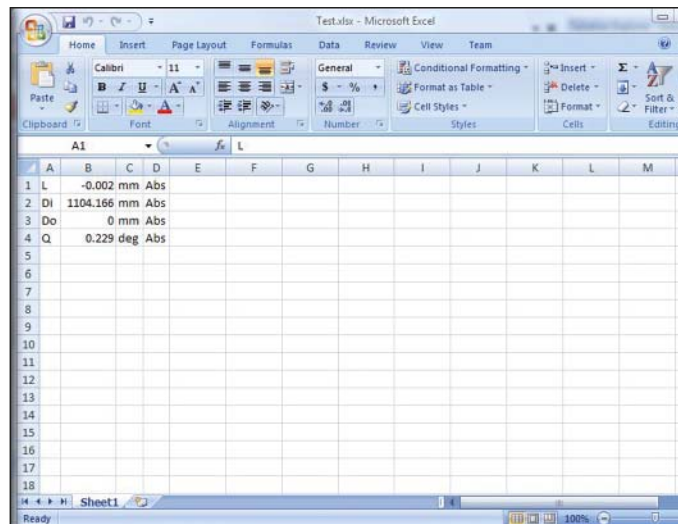

... and can be saved in an Excel table.

EIB 700 application software

The EIB application software covers two applications:


Commissioning and demonstration of the EIB 700

- Easy configuration of settings required for operation of the EIB 700 (e.g. input interface, data packets, operating mode, trigger settings).
- Management of one or more EIB 700 units.
- Simple representation of the positions transmitted by the EIB 700.
- Settings can be saved so that different application projects can be managed.

The user's guide provides more information.

Platform for customer applications

The EIB application software is made available in the source code. Based on this application, customers can quickly realize their own applications. The application software was programmed with C++/CLI and Windows Forms in Visual Studio 2008. This programming environment is widely used in technical application programming, but does not necessarily provide state-of-the-art operating techniques like those in Windows 7, for example. However, the customer can adapt the program to other graphic user interfaces.

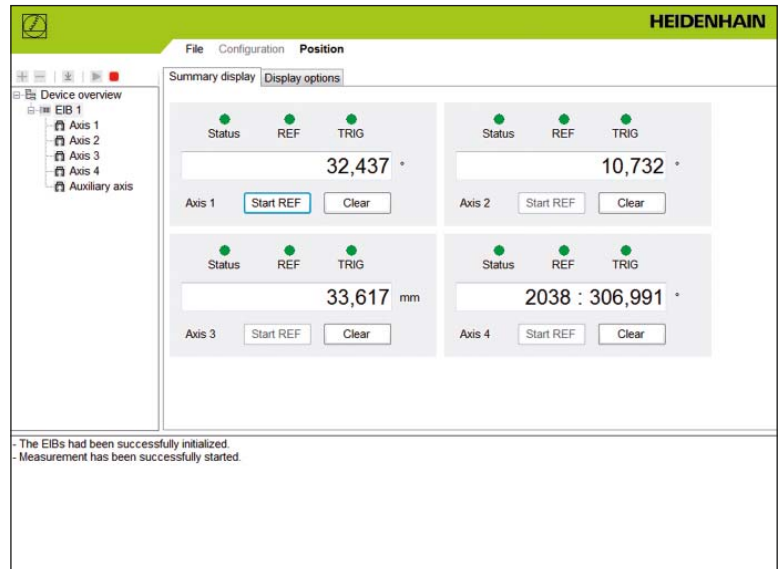

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 32-5061

E-mail: info@heidenhain.de

www.heidenhain.de

Vollständige und weitere Adressen siehe www.heidenhain.de
For complete and further addresses see www.heidenhain.de

DE	HEIDENHAIN Vertrieb Deutschland 83301 Traunreut, Deutschland ☎ 08669 31-3132 FAX 08669 32-3132 E-Mail: hd@heidenhain.de HEIDENHAIN Technisches Büro Nord 12681 Berlin, Deutschland ☎ 030 54705-240 HEIDENHAIN Technisches Büro Mitte 07751 Jena, Deutschland ☎ 03641 4728-250 HEIDENHAIN Technisches Büro West 44379 Dortmund, Deutschland ☎ 0231 618083-0 HEIDENHAIN Technisches Büro Südwest 70771 Leinfelden-Echterdingen, Deutschland ☎ 0711 993395-0 HEIDENHAIN Technisches Büro Südost 83301 Traunreut, Deutschland ☎ 08669 31-1345	ES	FARRESA ELECTRONICA S.A. 08028 Barcelona, Spain www.farresa.es FI	HEIDENHAIN Scandinavia AB 01740 Vantaa, Finland www.heidenhain.fi FR	HEIDENHAIN FRANCE sarl 92310 Sèvres, France www.heidenhain.fr GB	HEIDENHAIN (G.B.) Limited Burgess Hill RH15 9RD, United Kingdom www.heidenhain.co.uk GR	MB Milonis Vassilis 17341 Athens, Greece www.heidenhain.gr HK	HEIDENHAIN LTD Kowloon, Hong Kong E-mail: sales@heidenhain.com.hk HR	Croatia → SL HU	HEIDENHAIN Kereskedelmi Képviselet 1239 Budapest, Hungary www.heidenhain.hu ID	PT Servitama Era Toolsindo Jakarta 13930, Indonesia E-mail: ptset@group.gts.co.id IL	NEUMO VARGUS MARKETING LTD. Tel Aviv 61570, Israel E-mail: neumo@neumo-vargus.co.il IN	HEIDENHAIN Optics & Electronics India Private Limited Chetpet, Chennai 600 031, India www.heidenhain.in IT	HEIDENHAIN ITALIANA S.r.l. 20128 Milano, Italy www.heidenhain.it JP	HEIDENHAIN K.K. Tokyo 102-0083, Japan www.heidenhain.co.jp KR	HEIDENHAIN Korea LTD. Gasam-Dong, Seoul, Korea 153-782 www.heidenhain.co.kr MX	HEIDENHAIN CORPORATION MEXICO 20290 Aguascalientes, AGS., Mexico E-mail: info@heidenhain.com MY	ISOSERVE SDN. BHD. 43200 Balakong, Selangor E-mail: sales@isoserve.com.my NL	HEIDENHAIN NEDERLAND B.V. 6716 BM Ede, Netherlands www.heidenhain.nl NO	HEIDENHAIN Scandinavia AB 7300 Orkanger, Norway www.heidenhain.no PH	MACHINEBANKS' CORPORATION Quezon City, Philippines 1113 E-mail: info@machinebanks.com PL	APS 02-384 Warszawa, Poland www.heidenhain.pl PT	FARRESA ELECTRÓNICA, LDA. 4470 - 177 Maia, Portugal www.farresa.pt RO	HEIDENHAIN Reprezentantă Romania Braşov, 500407, Romania www.heidenhain.ro RS	Serbia → BG RU	OOO HEIDENHAIN 115172 Moscow, Russia www.heidenhain.ru SE	HEIDENHAIN Scandinavia AB 12739 Skärholmen, Sweden www.heidenhain.se SG	HEIDENHAIN PACIFIC PTE LTD Singapore 408593 www.heidenhain.com.sg SK	KOPRETINATN s.r.o. 91101 Trenčin, Slovakia www.kopretina.sk SL	NAVO d.o.o. 2000 Maribor, Slovenia www.heidenhain.si TH	HEIDENHAIN (THAILAND) LTD Bangkok 10250, Thailand www.heidenhain.co.th TR	T&M Mühendislik San. ve Tic. LTD. ŞTİ. 34775 Y. Dudullu – Ümraniye-Istanbul, Turkey www.heidenhain.com.tr TW	HEIDENHAIN Co., Ltd. Taichung 40768, Taiwan R.O.C. www.heidenhain.com.tw UA	Gertner Service GmbH Büro Kiev 01133 Kiev, Ukraine www.heidenhain.ua US	HEIDENHAIN CORPORATION Schaumburg, IL 60173-5337, USA www.heidenhain.com VE	Maquinaria Diekmann S.A. Caracas, 1040-A, Venezuela E-mail: purchase@diekmann.com.ve VN	AMS Co. Ltd HCM City, Vietnam E-mail: davidgoh@amsvn.com ZA	MAFEMA SALES SERVICES C.C. Midrand 1685, South Africa www.heidenhain.co.za
AR	NAKASE SRL. B1653AOX Villa Ballester, Argentina www.heidenhain.com.ar AT	HEIDENHAIN Techn. Büro Österreich 83301 Traunreut, Germany www.heidenhain.de AU	FCR MOTION TECHNOLOGY PTY LTD 3026 Victoria, Australia E-mail: sales@fcrmotion.com BE	HEIDENHAIN NV/SA 1760 Roosdaal, Belgium www.heidenhain.be BG	ESD Bulgaria Ltd. Sofia 1172, Bulgaria www.esd.bg BR	DIADUR Indústria e Comércio Ltda. 04763-070 – São Paulo – SP, Brazil www.heidenhain.com.br BY	GERTNER Service GmbH 220026 Minsk, Belarus www.heidenhain.by CA	HEIDENHAIN CORPORATION Mississauga, Ontario L5T2N2, Canada www.heidenhain.com CH	HEIDENHAIN (SCHWEIZ) AG 8603 Schwerzenbach, Switzerland www.heidenhain.ch CN	DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd. Beijing 101312, China www.heidenhain.com.cn CZ	HEIDENHAIN s.r.o. 102 00 Praha 10, Czech Republic www.heidenhain.cz DK	TPTEKNIK A/S 2670 Greve, Denmark www.tp-gruppen.dk																										

